


Table of Contents

Table of Contents	1
1 Outlook Description	3
2 Power Button Usage.....	4
3 Transfer Box	4
4 Using microSD Card	4
5 Getting Started	5
Charge the device	5
Turn the device on	5
Wi-Fi Network Setup	5
6 DESKTOP	5
7 Screen Lock.....	6
8 Pre-loaded Applications	7
9 Desktop Function Menu	9
10 Application Management	10
Install Android Applications	10
Download Android Applications direct from a Website.....	10
Uninstalling Android Applications.....	11
11 Go weather	11
12 CLOCK	11
Alarm.....	11
13 EREADER.....	12
14 BROWSER.....	13
15 CALENDAR.....	13
Add Event.....	13
16 CAMERA	14
Take Pictures.....	14
Take Videos	14
17 CALCULATOR	14
18 EMAIL	15
Add Email accounts.....	15
Email Inbox	15
Edit Email Account	16
Delete Email Accounts	16
19 My Pad.....	16
Copy Media between Computer and Tablet	17
20 MUSIC player	18

Play Music	18
The Operation with Music and Playlist	18
21 VIDEO player	19
Play Video	19
The Operation with Video and Playlist	19
22 QuickPic	19
23 CONTACTS.....	20
Add New Contacts.....	20
Add Contact to Favorites.....	20
Edit Contacts	20
Delete Contacts.....	21
24 SOUND RECORDER	21
25 Apk MANAGER.....	21
Install/uninstall Applications.....	21
26 YouTube	21
27 YouTube Hot Video	22
28 Wi-Fi Settings	22
29 Searching	23
30 Facebook.....	23
31 SmartTvEng.....	23
32 SETTINGS	24
Frequently Asked Questions.....	26
Android	26
Basic Device Functionary.....	26
Email.....	26
Media Cards	26
Music	26
Photos.....	26
Video	26
Wi-Fi	27
Battery Management	27
Important Safety Precautions.....	27

1 Outlook Description

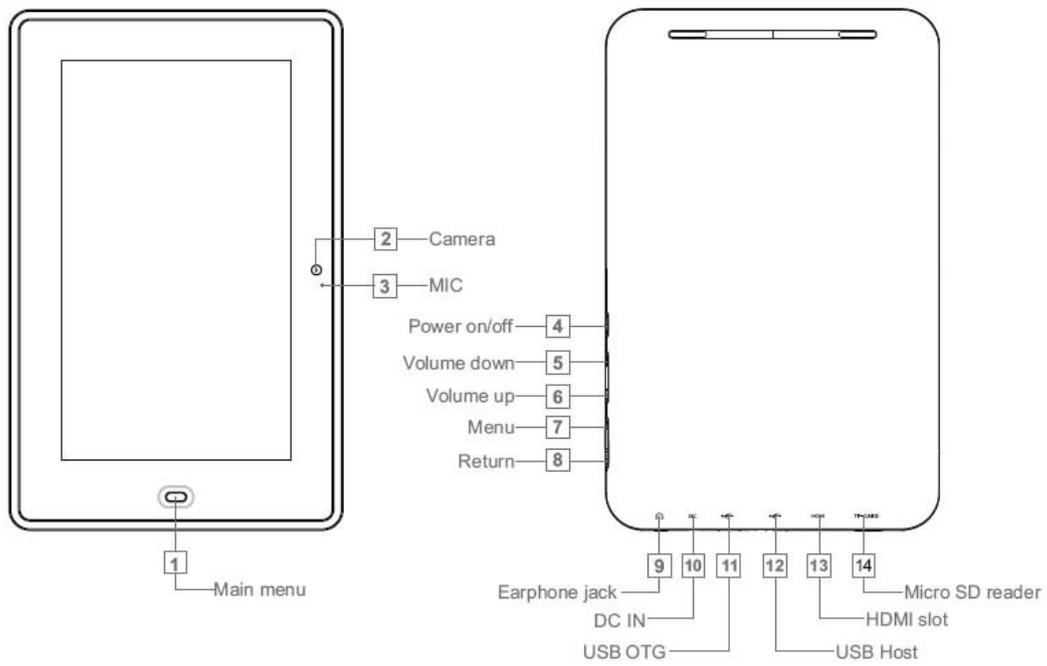

2 Power Button Usage

Turn On: Press the power button and hold for 2 seconds.

Turn Off: Press the power button and hold for 2 seconds, → tap **POWER OFF**.

Sleep Mode On/Off: Press & release the power button quickly to turn sleep mode on and off.

Force Off: If device does not respond, press and hold the power button for 5 seconds.

Note: If it is necessary, we don't suggest use **Force Off**. You should follow the steps to perform the shutdown.

3 Transfer Box

You must use the transfer box if you want to use a USB storage device (U-disk) for accessing/storing your photos, music or video files.



Transfer Box



USB interface—connect the U disk

U-Disk

Insert your U-disk to the transfer box, → insert the transfer box into the Tablet. When ready for use, it's OK.

☆ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the U-disk.*

4 Using microSD Card

☆ *The device supports a maximum 32GB microSD card.*

Insert your card into the microSD slot until it clicks into place. it's OK

Remove microSD Card

Use one of the following methods for moving the microSD card.

Close all applications or documents which have been opened on the card. Tap  → **Settings** → **SD card & device storage** → **Unmount SD card**. Press the card lightly; it is partially ejected allowing you to pull the card out.

☆ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the card.*

☆ *We recommend using major brands of memory cards to avoid incompatibility.*

5 Getting Started

Charge the device

- ☆ *You cannot charge the battery using the USB cable.*
- ☆ *You can use the device while the battery is charging, although the charging time is longer when operating and charging at the same time.*

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (approx. 4hour).

While charging, the battery indicator light is red. When fully charged, the battery indicator light is green.

Turn the device on

Press the power button and hold for 2 seconds.

Wi-Fi Network Setup

Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.

1. Tap  → **Settings**, → **Wireless & network**.
2. Select **Wi-Fi** to turn on.

The device automatically scans and lists all local Wi-Fi Network found. A  indicates secure networks that require login name/password to connect.

3. Tap the desired network to which you want to connect, → enter the **Network Password** if applicable, → tap **Connect**.
4. Tap  to return to the Desktop screen.

- ☆ *If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap **Add Wi-Fi network** and follow the prompts to add your network.*

6 DESKTOP



 **Return to Desktop from other apps**

 **Battery charge status**

 **Current Time**

 **media scanning**

 **Volume reduction icon**

 **Volume increase icon**

 **Function Menu icon**

 **Back icon**

 **Tap to view the applications screen**


☆ *Tap on any application icon to launch it.*

☆ *Touch, hold and then slide icons to reposition them on the screen.*

☆ *Touch, hold and slide icons onto  to remove them from the **Desktop** screen.*

7 Screen Lock

Can be set to automatically lock screen or quickly press the power button to manually lock screen. Lock screen displays the following:

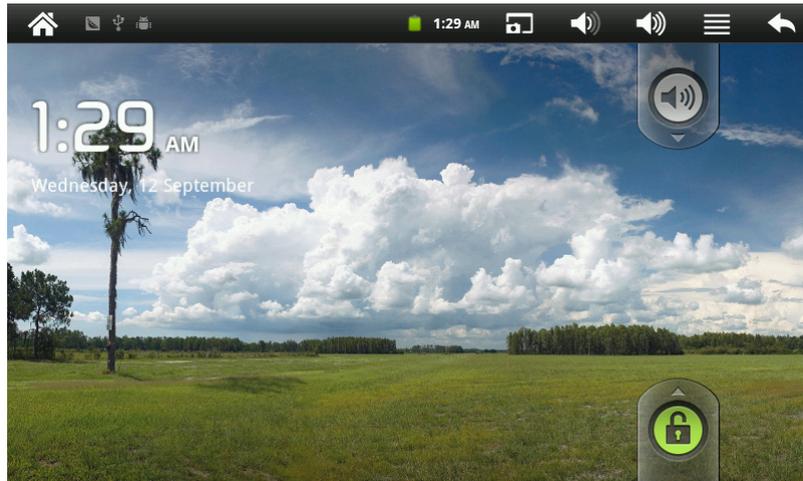

8 Pre-loaded Applications



Go weather

Display the weather.



Clock

Use as alarm clock with scheduled alarms.



eReader

Read e-book



Browser

Access the Internet and “surf the web” whenever desired.



Calendar

Calendar with ability to set events.



Camera

Take photos and save to internal memory or your memory device.



 
Calculator

Do calculation.



Gmail

Send/Receive email using your existing email addresses.



My Pad

File manager application for viewing and managing files and apps. Use to install Android apps, and to backup files to your SD card.

	Music Player	Play and manage audio files.
	Video Player	Play and manage video files.
	Quick pic	View and manage photo files.
	Contacts	Create a list of personal contacts, which can also be linked with your email.
	Sound recorder	Record sound
	APK Manager	Application manager for APK software
	YouTube	Quick launch to YouTube.com videos.
	YouTube hot video	Quick launch to YouTube.com hot videos.
	Settings	Multiple settings for personalizing and enhancing your Device.
	Wi-Fi Settings	Set Wi-Fi network.
	Searching	Searching web page
	Facebook	Landing the Facebook
	SmartTvEng	Watching internet TV

☆ To move an icon to the **Desktop** screen, touch & hold on the icon, and then release it when it appears on the **Desktop** screen.

☆ Touch, hold and then slide icons to reposition then on the screen.

☆ Touch, hold and slide icons onto  to remove them from the **Desktop**

screen.

9 Desktop Function Menu

On the **Desktop** screen, you can tap  to display the **Function Menu**.



 Add	<p>The viewable portion of the Desktop screen allows only 16 icons. In order to add more items, finger slide the screen horizontally to expose available space, and then tap the Add icon again. If the screen is full, the Add icon won't respond.</p>	
	Shortcuts	<p>Add quick launch shortcuts on the Desktop to applications, bookmarks or settings.</p> <p>☆ <i>If you select items that are shortcuts already on the Desktop screen, they will be duplicated, resulting in multiple icons for the same item.</i></p>
	Widgets	<p>Analog clock: Add a round analog clock.</p> <p>Calendar: Add a calendar widget to display current date & events.</p> <p>Music Player: Add a music widget to quickly begin playing music without launching the music application.</p>
Folders	<p>New Folder: Add a folder into which you can add applications as desired. To move applications on the Desktop screen into the folder, touch, hold & drag the icons directly on top of the folder icon.</p> <p>To add applications from the All Application screen, first tap on the folder to open it, open the All</p>	

		Application screen, and then touch & hold on an application icon. It is copied into the folder.
 Wallpaper		Select wallpaper from Picture and Wallpapers .
 Search		Perform a quick Google search. Tap in the entry field, → enter the desired search text, → tap  .
 Notifications		List any pending notifications (i.e., new email, calendar events, etc).
 Settings		See “Settings” on page 24.

10 Application Management

Install Android Applications

☆ *There are many interesting and free Android applications that can be found on the web. Just launch your web browser and do a search for “Android applications”.*

Purchased or free Android applications that you have downloaded to your computer can be installed quickly & easily on your Tablet using the  **My Pad** application.

1. Copy the **.apk** files that you want to install onto a SD card or USB device, → insert or connect to your Device.
2. Tap the  **my pad** application icon.
3. Tap  or  and locate the folder in which the .apk application files were saved.
4. Tap on a **.apk** file → **Install**.
The application is installed and the application icon is added to the **Applications** screen.
5. Tap **Open** to launch the application now, or tap **Done** to return to the **File Browser** screen.

Download Android Applications direct from a Website

You can download Android applications directly from websites, and then quickly and easily install them on your device.



1. Tap the **Web** application icon to launch the internet browser.
2. Enter the desired website URL, and tap the **download** link for the application you want to install on your device.
3. After the download is complete, touch & hold on the download file (in the **Download history** screen), → tap **Open** → **Install**.

Uninstalling Android Applications

You can also quickly and easily uninstall the Android applications that you have installed.



1. Tap **Settings** → **Applications** → **Manage applications**.
2. Tap the application you want to uninstall, → **Uninstall**.
3. Tap **OK** to confirm the Uninstall.



11 Go weather



Tap the **go weather** application icon.

General setting

You can set Temperature Unit(°C), Update frequency and Auto Wallpaper.

My cities

You can add city and set it to be my city.

You can make the weather displayed on the **Desktop** through adding widget. The way is: tap



→ **Add** → **Widgets** → **go weather**.



12 CLOCK



Tap the **Clock** application icon. You can see the time and date.

Alarm

You can use your device as an alarm clock by setting multiple alarms.

☆ *This clock icon  displayed at the top of screens*

indicates that one or more alarms have been set and are active.

Add Alarm

1. Tap the  **Clock** application icon.
2. Tap  → **Add alarm**.
3. Set up your alarm as desired.
☆ *If you don't select a repeat, the alarm is automatically deleted after it is activated.*
4. Tap **Turn alarm on**.
5. Tap **Done**.

Shut Off Alarm Alert

When a scheduled alarm is activated, a pop-up window with the alarm title appears. Tap Snooze if you want to be reminded again in 10 minutes. Tap Dismiss to cancel the alert.

Turn Alarm on

On alarms that you have set to repeat, you may want to temporarily turn on alarms rather than delete them.

1. In the Alarm screen, tap  on the alarm(s) you want to turn on.
2. Tap  to turn on again.


Edit Alarm

1. Tap the  **Clock** application icon.
2. Tap on the alarm you want to edit, → make desired edits.

Delete Alarm

1. Tap the  **Clock** application icon.
2. Tap on the alarm you want to delete.
3. Tap  → **Delete alarm**.

Tap  to return to the **Desktop** screen.

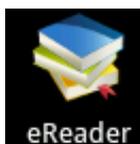

13 EREADER

Tap the  eReader icon to enter the interface of eReader.


1. Press the **import** to move files in other folder to the eReader
2. Tap the **edit** to alter the files in the eReader



14 BROWSER

Users can connect to the Internet through a browser.

Click the browser icon on the Desktop , and then you can open the Web browser.

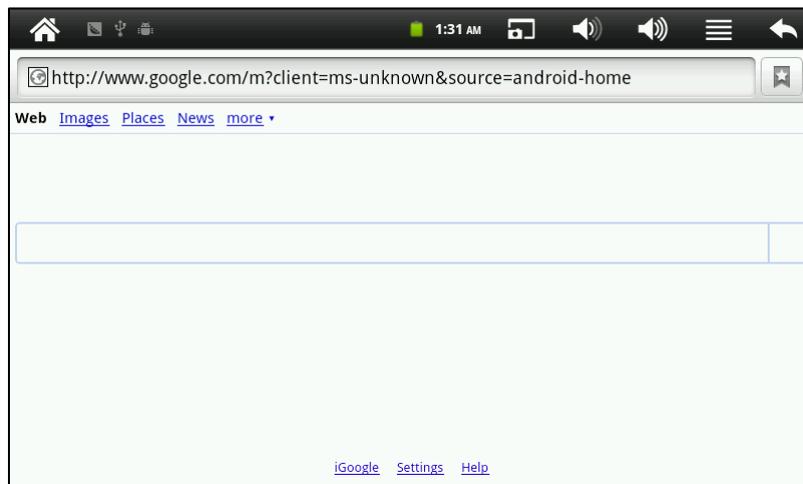

15 CALENDAR

Tap the  **Calendar** application icon.

For the first time using the **Calendar**, you need to add an Exchange account. Enter account email address and password. Click **Next** and follow the prompts to complete the account configuration. Then you can use the **Calendar**.

Add Event

1. On the **Calendar** screen, tap on the date to which you want to add an event.
 2. Tap on the event time, → tap in each entry field to enter the desired event information.
 3. Tap **Done**.
 4. Tap  to select desired **Calendar** screen.
- ☆ *Dates with green bars indicate scheduled events.*



16 CAMERA

Tap the  Camera application icon.

Take Pictures

1. In **Camera** → tap  to take the picture.
2. The picture will be saved.
3. Tap the picture thumbnail  to scan the picture.
4. Press **Back** to the **Camera**.
5. Tap  to exit the **Camera** and back to the **Desktop**.

Take Videos

1. Tap  switch to video, and you can take videos.
2. Tap  to begin and tap  to stop.
3. The video will be saved.
4. Tap the video thumbnail  to play the video.
5. Press **Back** to the **Camera**.
6. Tap  switch back to camera.
7. Tap  to exit the **Camera** and back to the **Desktop**.

Note: You can tap  to choose to save the files in the Localdisk or the SD card.



17 CALCULATOR

1. Tap the  Calculator application icon.
2. Tap the numbers and sign of operation to do the calculation.
3. Tap **CLEAR** to clear the result one by one, tap and hold **CLEAR** to clear all.



18 EMAIL

☆ *Google, POP3 and SMTP accounts are supported.*

Add Email accounts

You can enter one or more personal email addresses that you would like to access through your Tablet.



1. Tap the **Email** application icon.
2. On the **Your Accounts** screen, tap **Next**.
3. Tap in the **Email** address entry field, → enter your email address.
4. Tap in the **Password** entry field, → enter your email password.
5. Tap **Done**.
6. **Manual Setup** (*optional*): The server settings are automatically populated based on your email account provider (*i.e., gmail.com, etc*). However, if you need to change the server settings tap **Manual Setup** and make necessary changes.
7. Tap **Next**.
8. Optional: Enter a name for the account.
9. Enter name for outgoing message, → tap **Done**.

☆ *After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).*

Email Inbox



1. Tap the **Email** application icon.
2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the **Accounts** screen.
3. Tap on the desired email account, → tap **Inbox**.

Open Email Message

1. On the **Inbox** screen, tap on an email to open it.
2. For attachments, tap **Open** to launch appropriate application, or tap **Save** to save attachment to a SD card.
3. To replay, tap **Reply** or **Reply all**.
 - a. Tap in the Compose Mail entry field to enter your reply message.
 - b. Tap Send to send immediately, Save as draft to save without send or Discard to discard without saving or sending.
4. To delete the email immediately, tap **Delete**.

Compose New Email Message

1. On the Inbox screen, tap  → **Compose**.
2. Tap in the **To** entry field and then enter the recipient's email address.

3. Optionally, if you want to add Cc or Bcc recipients, tap  → Add Cc/Bcc, and then enter the recipient's email address.
4. Tap in the **Subject** entry field to enter your desired subject title.
5. Tap in the **Compose Mail** area to enter your personal message.
6. If desired, tap  → **Add Attachment** to attach a file.
7. When ready to send the email, tap  → **Send**.

Edit Email Account

1. Tap the  Email application icon.
2. On the Inbox screen, tap  → Account settings.
3. Set your desired preferences to customize your email account.
4. Tap  to return to the Inbox screen.

Delete Email Accounts

☆ *If you have multiple accounts, and you delete the account designated as the default account, the next email listed is automatically set as the default.*


1. Tap the  **Email** application icon.
2. On the **Inbox** screen, tap  → **Accounts**.
3. Touch & hold on the account you want to delete.
4. In the pop-up **Account options** window, tap **Remove account**.
5. Tap **OK** to confirm the deletion.

Set Default Email Account

You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

1. Tap the  **Email** application icon.
2. On the Inbox screen, tap  → **Account Settings**.
3. Tap **Default Account** to select it.

If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.

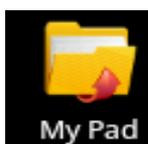

19 My Pad



Tap the **My Pad** application icon to view the files on all storage devices (*Internal memory, SD card, USB device*), and to quickly & easily install Android application on your Tablet.

Use the icons across the top of the screen as follows:



Local disk (Internal memory)



 
Your SD card



U-disk/USB flash drive (using the included transfer box)




Transfer Box




USB interface—connect the U disk



 hold on the files you want, then tap the cut to move the folders or files



Create a new folder

 

hold on the files you want, then tap the delete to delete the files or folders



Allows you to multi-switch items

Copy Media between Computer and Tablet

You can use the File Browser to copy files between an external storage devices and your computer. You must first copy the desired files onto a SD card or USB device.

★ *The internal device storage is titled "LocalDisk", a memory card "sdcard", and a USB storage device is titled "udisk".*

★ *The instructions below are for copying from a SD card or USB storage device into the device. You can use the same method to copy from the device to a SD card or USB storage device, and then connect the storage device to your computer to transfer the files into the desired folder on your computer.*

1. Tap the  or  to display the contents of your storage device.
2. Tap and hold in the folder/file you want to copy, → tap **Copy**.
3. Tap on the  Internal Memory, → tap on the folder into which you want to copy the file, → tap **Paste**.



20 MUSIC player


☆ *Audio file formats supported: MP2, MP3, WAV, AAC, WMA.*

Play Music



1. Tap the **My Music** application icon.
2. Select an audio file from All/Albums/Artists/Directories/My Favourites/User Defined Playlists to play it.
3. To stop the music, tap the **Pause**  icon.
4. To leave the music playing and return to previous screens, tap  or tap  to return to the **Desktop** screen.

Tap the photo on the left corner can enter the Music Player interface. It shows like:

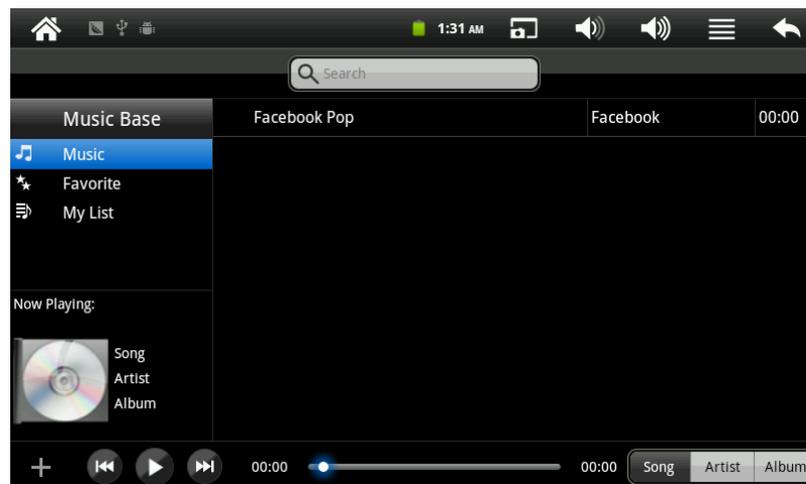

At this interface, you can do: view the lyrics, play / pause, switch to the previous / next, added to favorites, loop and random operation etc.

The Operation with Music and Playlist

Add playlist

1. Tap  on the left corner.
2. Input the playlist name.
3. Tap **Add**.

Rename or Delete playlist

Tap and hold in the playlist, → tap **Rename** or **Delete**.

Add music

1. Tap and hold in the music you want to add, → tap **Add**.

2. Click the following item to add music in it (if you don't want to add, tap Cancel).

Delete music

Tap and hold in the music you want to delete, → tap **Delete**.



21 VIDEO player

☆ *Video file formats supported: MPEG1/2/4, MJPG, H263, H264. In addition to H264 which is supported by (720× 480) resolution, the other video formats are supported (1280×720) resolution.*

Play Video



1. Tap the **Video player** application icon.
2. Select a video file from Movies/ Favorites/history to play it.
3. Tap on the screen to display video controls (adjust volume, pause/play, previous/next, adjust brightness).
4. Tap **Back button** or  to return to the **Video player** screen.

The Operation with Video and Playlist

Add playlist

1. Tap  on the left corner.
2. Input the playlist name.
3. Tap Add.

Rename or Delete playlist

Tap and hold in the playlist, → tap **Rename** or **Delete**.

Add video

1. Tap and hold in the video you want to add, → tap **Add**.
2. Click the following item to add video in it (if you don't want to add, tap Cancel).

Delete video


Tap and hold in the video you want to delete, → tap **Delete**.



22 QuickPic

☆ *Photo file formats support: JPG, JPEG, BMP, and PNG.*

1. Tap the  QuickPic application icon, → tap on a group of photos.
2. To view individual photo, tap on the desired photo.
3. Tap Back button to return to the photo gallery screen.
4. After choosing the photos, Tap  on the upright of the screen
5. Tap  to move the pictures
6. Tap  to copy the photo to other file folder
7. Tap  to rotate the picture
8. Tap  to delete the photo

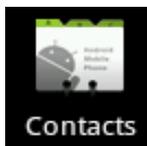

23 CONTACTS

You can create an address book of your personal contacts, including personal notes as desired.

Add New Contacts

1. Tap the  **Contacts** application icon.
2. Tap  → **New Contact**.
3. Tap in the name fields to enter the contact's first & last name.
4. Tap  at the right of options to reveal additional choices.
5. Tap on the option name to reveal choices.
6. Tap in the option entry fields to enter the contact's information.
7. Tap **Done**.

Add Contact to Favorites

1. In the **Contacts** screen, tap on the desired contact name.
2. Tap  in the upper right corner.
3. Tap  to return to the **Contacts** screen.
4. Tap **Favorites** to view list of favorite contacts.

Edit Contacts

1. In the **Contacts** screen, tap on the desired contact name you want to edit.

2. Tap  → **Edit Contact**.
3. Make desired changes, → tap **Done**.

Delete Contacts

1. In the **Contacts** screen, touch & hold on the contact, → tap **Delete contact**.
OR

In the **Contacts** screen, tap on the contact you want to delete, tap  → **Delete Contact**.

2. Tap **OK** to confirm the deletion.



24 SOUND RECORDER

You can record a message by the sound recorder.

Tap the  **Sound recorder** application icon

- press the left icon on the bottom of the screen to start record
- press the right icon on the bottom of the screen to stop and deal with the recording



25 Apk MANAGER

Use Apk Manager to manager applications and widgets.

Install/uninstall Applications

1. Tap the **uninstall/install** application icon. The applications will be installed or uninstalled.
2. Tap **select** to select the apps.
3. Tap **scan path** to choose the scanning path for the apps
4. Tap **exit** to get out



26 YouTube

1. Tap the  **YouTube** application icon to view *YouTube.com* videos.
2. Tap on a video to launch it.
3. Tap on the screen to display video controls (adjust volume, pause/play, previous/next, adjust brightness).
4. Tap **Back button** to return to the **YouTube** screen.



27 YouTube Hot Video

1. Tap the  **YouTube Hot video** application icon to view *YouTube Hot video.com* videos.
2. Tap on a video to launch it.
3. Tap on the screen to display video controls (adjust volume, pause/play, previous/next, adjust brightness).
4. Tap **Back button** to return to the **YouTube Hot video** screen.



28 Wi-Fi Settings

Tap  **Wi-Fi Settings** application icon.

1. Tap the WIFI (turn on WIFI), then  will appear on the right
2. All the AP in the vicinity will be listed, click to select the name you want to connect to AP;
3. If the AP is connected successfully before, the AP information will be saved in the pop-up window, select "Connect" starts to connect, choose "forget" to remove AP information;
4. If the AP is not encrypted, in the pop-up window, select "Connect" Start Connection;
5. If the AP is encrypted, enter the password in the pop-up window, and click "Connect" Start Connection;
6. When internet connections are successful, the wireless connection icon in the status bar appears.



29 Searching



Tap the **searching** application icon

1. Inputting the address of the website, then enter to browse the page
2. Tap the the ▼ under the  to choose what to find
3. Tap  to scan bookmarks/most visited/ history



30 Facebook



Tap **Facebook** application icon.

Input E-mail and password then click **Login** to land the Facebook



31 SmartTvEng



Tap **SmartTvEng** application icon.

1. Tap **Internet TV** to watch program
2. Tap **streaming+** to add or reset your favorite streaming, and tap **all apps+** can operate other apps.
3. Tap the relevant icon on the bottom of the screen to get the relevant function



32 SETTINGS

Wireless & networks	Wi-Fi	Turn on Wi-Fi.
	Wi-Fi Settings	Set up & manage wireless access points.
	Airplane mode	Disable all wireless connections.
	3G network settings	Set up 3G network.
USB	Mass storage	Configure USB to mass storage.
	ADB	Configure USB to ADB.
Sound	Silent mode	Silence all sounds except media & alarms.
	volume	To adjust the Media volume, Alarm volume and Notification volume. Tap & slide  and then tap OK .
	Notification ringtone	Select desired ringtone sound.
	Audible selection	Select to enable a sound when making a screen selection.
	Screen lock sounds	Play sounds when locking and unlocking the screen.
Display	Brightness	Tap & slide  to adjust the screen brightness as desired, and then tap OK .
	Auto-rotate screen	When selected, the orientation of the screen switches between Portrait and Landscape automatically when you rotate the device.
	Screen timeout	Adjust the delay before the screen automatically turns off.
	Suspend timeout	Adjust the delay before the device automatically suspend after the screen turn off.
	Animation	Select no/all/some animation
Location and Security	Set up screen lock	Lock screen with a pattern, PIN, or password.
	Visible passwords	Show password as you type.
	Select device administrators	Add or remove device administrators.
	Use secure credential	Allow applications to access secure certificates and other credentials.
	Install from SD card	Install encrypted certificates from SD card.
	Set password	Set or change the credential storage password.
	Clear storage	Clear credential storage of all contents and reset its password.
Applications	Unknown sources	Allow installation of non-Market applications.
	Manage applications	Manage and remove installed applications.
	Running services	View and control currently running services.

	Development	Set options for application development.
Privacy	Factory data reset	<p>Tap to reset the device to its initial factory state, erasing all data and downloaded applications. Tap Reset Device to proceed with reset, or tap  to cancel and return to previous screen.</p> <p>WARNING! The following will be erased during the factory reset:</p> <ul style="list-style-type: none"> ~ Google account ~ System and application data and settings ~ Downloaded applications <p>The factory reset will NOT erase:</p> <ul style="list-style-type: none"> ~ Current system software and bundled applications ~ SD card files, such as music or photos
storage	Internal total space	
	System-available space	
	User available space	
SD card & device storage	Total space, Available space	It values appears when a SD card is inserted in device.
	Unmount SD card	When the SD card is inserted, tap it to safety remove the SD card.
	Format SD card	N/A for this device.
Language & keyboard	Select language	Select the language and region according to your location.
	Android keyboard	Onscreen keyboard settings.
	User dictionary	You can add words to a personal dictionary, words that may not be included in the default dictionary.
Date & time	Set date	Set the date.
	Select time zone	Select the time zone.
	Set time	Set the time.
	Use 24-hour format	You can choose to use 24-hour format or 12-hour format.
	Select date format	You can select the date format.
About device		View Status (Battery, Wi-Fi, etc), Battery use, Legal information, Model number, Android version, Kernel version and Build number.

Frequently Asked Questions

Android

Q: What Android OS version is on my Device?

A: 2.2

Basic Device Functionary

Q: Do I have to charge the battery before use?

A: You should charge the battery for at least 4 hours, but you can use the device while it's charging. Use the include power adapter to charge; this device does not charge via the USB cable.

Email

Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if you account is supported.

Media Cards

Q: Which media cards are compatible with my Device?

A: micro SD cards.

Music

Q: What type of music files can I play on my device?

A: MP2, MP3, WAV, AAC, WMA

Q: How do I add music files to my device?

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Photos

Q: What type of photo files can I view on my device?

A: JPG, JPEG, BMP and PNG.

Q: How do I add photo files to my device?

A: Copy the photo files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Video

Q: What type of video files can I play on my device?

A: MPEG1/2/4、 MJPG、 H263、 H264. In addition to H264 which is supported by (720 × 480) resolution, the other video formats are supported (1280 × 720) resolution.

Q: Can I play YouTube videos on my device?

A: Yes. You can tap the YouTube application icon to quick access videos.

Q: How do I add video files to my device?

A: Copy the video files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Wi-Fi

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No. The Wi-Fi adapter is built-in to the device.

Battery Management

The battery is not fully charged out of the box, so it is recommended that you charge the battery for at least 4 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use your Tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

Charge battery

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (approx. 4hour).

☆ *You cannot charge the battery using the USB cable.*

When fully charged, the battery icon displays as: .

A fully discharged battery takes approximately 5 hours to fully charge, but you can use the device while plugged in when desired.

Important Safety Precautions

Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- Do not remove the cover. There are no user-serviceable parts inside.

Clean your Device

Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.
