



Sungale

ID800T

Digital Photo Frame User's Manual

8

Contents

User Notice

This product has met all electronic emissions standards and is registered for use in the home. It can be used safely in all areas, including residential.



Chapter 1 Introduction

Product Introduction	3
Safely Precautions	4
Package Contents	6
Photo Frame Overview	7

Chapter 2 Connection

Power Connect	10
Memory Card Insertion	12
Memory Card Extraction	13

Chapter 3 Usage

Photo	15
Music	18
Movie	20
E-Book	21

Chapter 4 Editing & Settings

Editing	23
Setting	25
Screen Calibration	28
Calendar&Clock	29

Chapter 5 ASSP Guide

How to start ASSP	33
Introduction for the interface of ASSP	35

Chapter 6 Customer Management

Question&Answer	37
Troubleshooting	38
Specifications	39



Chapter 1

Introduction

Product introduction	3
Safety Precautions	4
Power Related	4
Product Related	5
Components	6
Basic components	6
Player Overview	7
Electronic Frame	7
Rear Side	8

Digital Photo Frame

Product Introduction

Our Digital Photo Frame is a convenient image album that keeps your favorite images at your fingertips.

With its bright and vivid LCD screen, the Digital Photo Frame eliminates the need for tedious photo printing and injects a new level of convenience into your life.

With its diverse file management functions, this Digital Photo Frame allows you to relive wonderful memories anytime.

You can use the Digital Photo Frame to enjoy memories by presenting them with refined images and music.

Digital Photo Frame

Safety Precautions

 
Make sure to review the precautions.

Power Precautions


⚠ WARNING: indicates information that, if neglected, could result in serious injury and/or death to the user.

⚠ CAUTION: indicates information that, if neglected, could result injury to the user and/or material damage.


01. Use only the power supply included with your frame. Failure to do so may result in product malfunction.



 
02. When connecting your power source, make sure that your hands are free of moisture. Failure to do so could result in electrical shock.

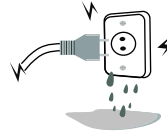

 
03. Make sure that the power supply is firmly plugged in and not loose. Failure to do so could result in electrical shock.



 04. Do not let the power cord get overly entangled and do not place any heavy objects on the cord. Failure to do so could result in electrical shock.

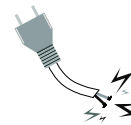

 05. Do not connect the power supply to an electrical power strip with other various. Failure to do so could result in fire.

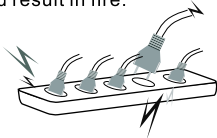

06. Disconnect the power supply during inclement weather conditions that include thunder and lightning. Failure to do so may result in fire.



 
Digital Photo Frame

Safety Precautions

Please read the following guidelines carefully to ensure user safety and avoid malfunction.

Product Related Precautions


01. Dropping the product or subjecting it to a significant impact can cause critical damage.

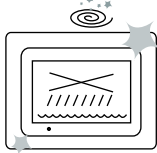


02. Spilling water or any other liquid on the product can cause critical damage.



 
03. Striking or scratching the LCD screen may cause critical damage.

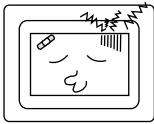

 
04. When cleaning the LCD screen, turn off the power and wipe it gently with a soft cloth.



 05. Do not subject the product to severe humidity and/or heat.

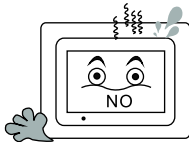

 06. Make sure to power off the unit before disconnecting the power supply.

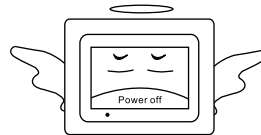


Digital Photo Frame

Package Contents


For the improvement of product performance and/or quality, the basic components may be modified without prior notice. The components may differ slightly in appearance with the provided images.



 Digital Photo Frame

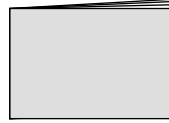


User's Manual

 

Power Adapter



 Quick-Start Guide

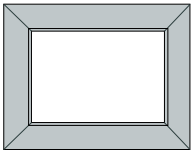


A Wooden Frame

Digital Photo Frame

Photo Frame Overview

 The package contents may differ slightly in appearance with the provided images

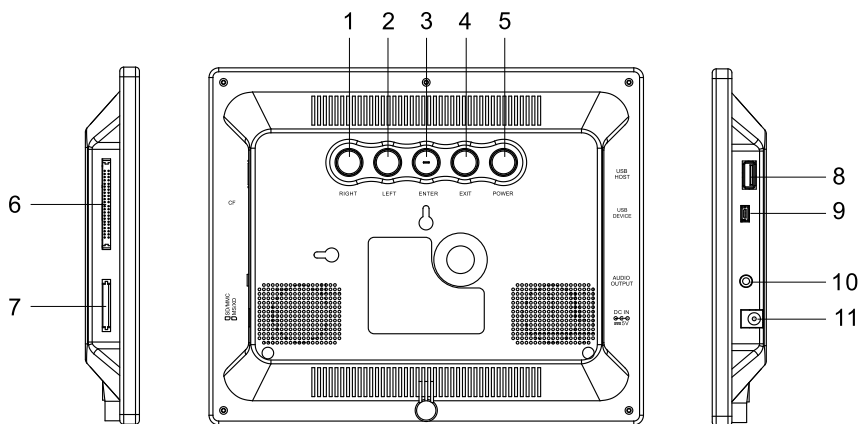

Left View

Back View

Right View

Back View

1. **RIGHT:** Move the cursor to right or down; increase volume when playing movie.
2. **LEFT:** Move the cursor to left or up; decrease volume when playing movie.
3. **ENTER:** Enter into the selected menu or start playing the selected file.
4. **EXIT:** Stop the current action and return to the previous menu.
5. **POWER:** Turn the player off and on .

Left View

6. **CF CARD SLOT:** Insert CF card here.
7. **MS/SD/MMC/XD CARD SLOT:** Insert supported memory card types here.


Right View

8. **USB HOST :** Connect the USB cable from the DPF player to USB removable storage device / Mobile hard disk.
9. **USB DEVICE:** Connect the photo frame to PC
10. **AUDIO OUTPUT :**Connect to audio equipment.
11. **DC IN :** Insert the DC power adapter to the frame.


Digital Photo Frame

Photo Frame Overview

 - 12. Wall mountable hole.
- 13. Stand: Using the stand provided you can position the photo frame with horizontal or vertical view.
- 14. Speaker: Built in stereo speakers

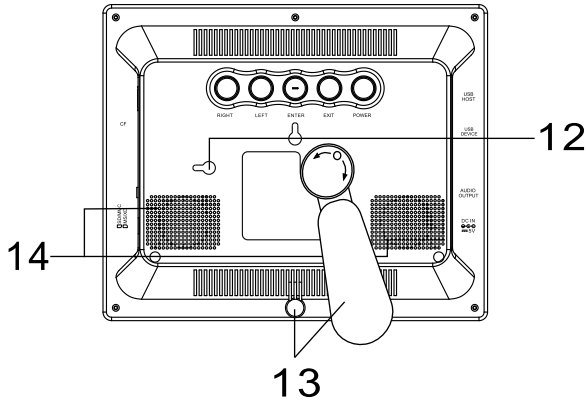

Back View

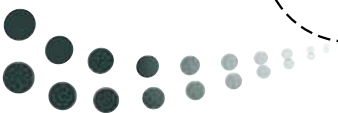 

Chapter 2


Connection

Connection	10
Power Connection	10
Connect to USB Port	11
Memory Card Insertion	12
Memory Card Extraction	13

Digital Photo Frame

Connection

 Power Connection

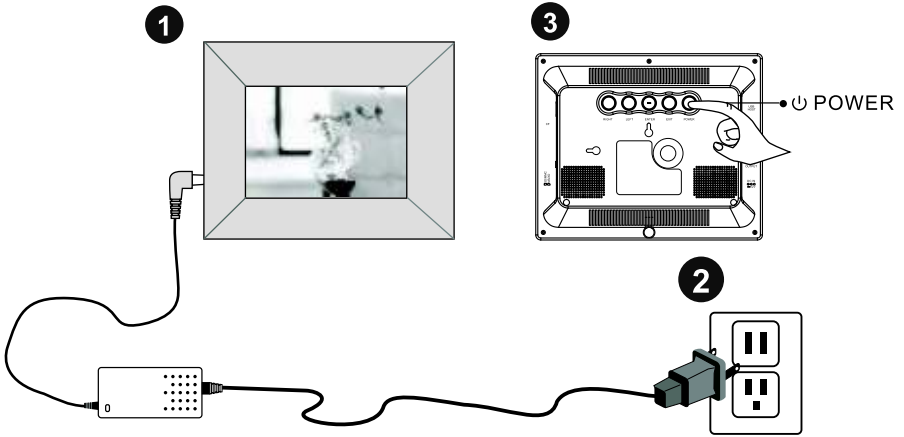


1. Connect the power adaptor to the DC 5V jack on the left side of the frame.
2. Plug in the power cord.
3. The frame will automatically power on.

Digital Photo Frame

Connection

USB Removable Storage Devices

 Insert USB removable storage devices (ie: flash drives) into the USB HOST port on the side of the frame.

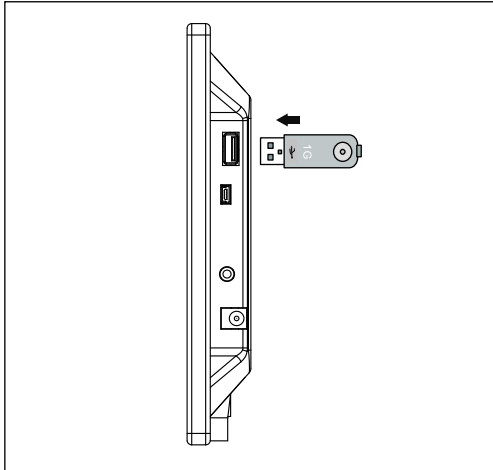


Digital Photo Frame

Connection

Memory Card Insertion

When inserting a memory card into the frame, refer to the image to make sure that both the memory card and the frame are aligned correctly (the side of the memory card on which sticker is affixed should face the frame).

 CF, SD, Memory Stick, MMC cards, XD cards are compatible with this unit. Aligning the memory card upside down may cause user-error damage. This may nullify the warranty.

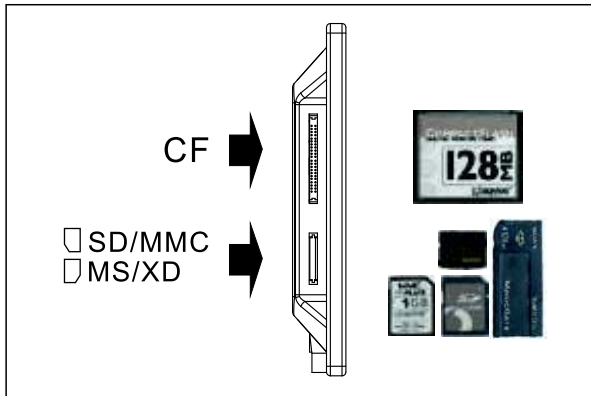



Digital Photo Frame

Connection

Removing the Memory Card

  When removing a memory card from the frame, pull the card straight away from the unit. Avoid bending the card.

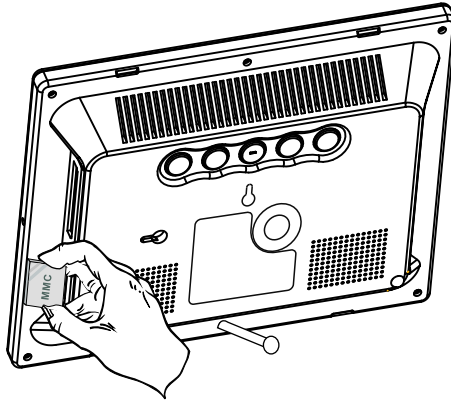

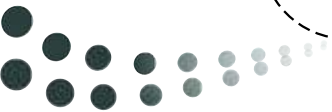

Chapter 3

Usage


Photo	15
Music	18
Movie	20
E-Book	21

Digital Photo Frame

Photo

Locate the Device Directory

 In the main menu, select the desired item (Internal Memory / Memory Card/Flash Drive) and touch it to enter the file list.

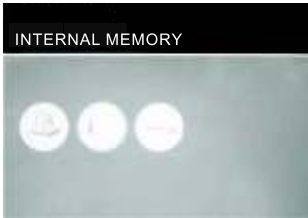

Step show pictures

Select the desired photo and touch it in the file list for a preview of the picture on the left side of the screen. Touch the preview of the photo on the screen to enter the step show mode



Previous pictures

In the step show mode, touch the  to skip to the previous picture and keep interface.

Next pictures

In the step show mode, touch the  to skip to the next picture and keep interface.

Rotate

In the step show mode, touch  repeatedly to rotate the picture anticlockwise.

 
Digital Photo Frame

Photo





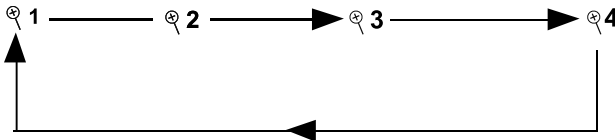

Zoom

During photo playback, touch  repeatedly will magnify the image in the following sequence:



Background Music

In the step show mode, touch  to play background music, touch  or  to increase or decrease the volume; touch  to mute the volume.

Note: To utilize this feature you must have picture files (JPG, BMP, PNG, TIFF) and music files saved to the same file source (ie: Internal Memory/Memory Card/Flash Drive).

EXIT

In the step show mode, touch  to return to the previous menu.

Digital Photo Frame

Photo

Slide show pictures

In the step show mode, touch  , the picture will be displayed one by one.



Note: If you want to slideshow pictures with background music, please play music in step show mode.

Exit

 
Touch the screen to return to the previous menu.

Digital Photo Frame

Music

Choose a song

Touch the desired music file in the file list to select it.

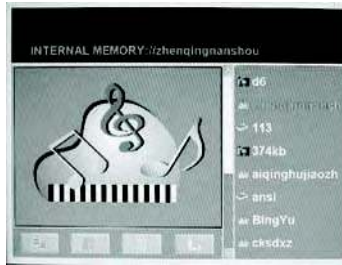



Play a song

After selecting the desired song, touch the left preview frame of the screen to play music.




Playing Music

During pause mode, touch  to restart playing from the hold point ;During play mode, touch  to start playing the selected song.

Digital Photo Frame

Music

Pausing Music

During play mode, touch  .


Adjusting the Sound

During play mode, touch +/- icon at the left of the screen to adjust the volume.

Muting on and off the Sound

During play mode touch  to toggle sound on and off.

Exit

Touch  to return to the previous menu.

Digital Photo Frame

Movie

Choose a movie

Touch the desired movie file to select it.



Play a movie

After selecting the desired movie, touch the preview menu on the left of the screen to start to play.

Adjust volume

Press RIGHT button on the panel board to increase the volume;press LEFT button on the panel board to decrease the volume.

Exit

Touch the screen to return to the previous menu when playing.

Digital Photo Frame

Choose a E-book file

E-Book

Touch the desired txt file in the file list to select it.



Read a file

After selecting the desired E-book file, touch the preview menu on the left of the screen to read.

Previous page

Touch ◀◀ to skip to the previous page.

Next page

Touch ▶▶ to skip to the next page.

Exit

Touch [EXIT] to return to the previous menu.



Chapter 4

Editing & Settings

Editing

Copy and Paste a File	23
Delete Files	24


Settings

Change Slide Show Intervals	25
Slide Show Mode	26
Display	27
Others	27
Screen Calibration	28
Calendar & Clock	29


Digital Photo Frame

 Editing Files

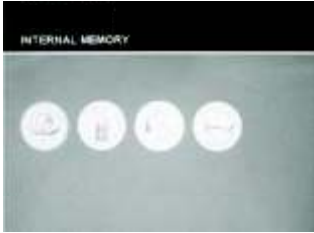

In the main menu, select the desired device (Internal Memory/Memory Card/Flash Drive) and touch the corresponding icon to enter its file list.



A. Copy and Paste Files

Touch  to highlight the select item, touch the file items in file list to choose the files to be copied, and the color of the selected file will turn red.




Touch  to return to the parent directory, select the device or folder you want to transfer the files to. Touch  to start transferring the files. You will see the following screen:




Digital Photo Frame

Editing Files

B: Delete Files

Touch  and highlight the files in the file list to be deleted.



Touch  to delete the files selected.



Digital Photo Frame

Settings

In the main menu, touch **SETTINGS** to enter the setup menu.

1. Change Slide Show Intervals

In the **SETTINGS** menu, touch **SLIDE SHOW** to access the following choices:



Touch and set the interval time of slide to 5s/10s/15s.



EXIT

Touch **EXIT** to return to the previous menu.

Digital Photo Frame

Settings

2. Slide show mode

In the SETTINGS menu, touch slide show mode to access, the screen will display as below:



Touch the corresponding item to set your picture transition effect. You may choose between top to bottom wipe, left to right wipe, randomized wipe etc.

EXIT

Touch EXIT to return to the previous menu.

Digital Photo Frame

Settings

3.Display

In the SETTINGS menu, touch display to access, the screen will display as below :



Touch Optimal to display the picture in full screen when in slideshow mode, there is no black edge; Touch Original to display the picture by its original rate when in slideshow mode, there may be one black edge on the top and the bottom or the left and the right of the screen.

EXIT

Touch EXIT to return to the previous menu.

4.Others

In the SETTINGS menu, touch others to access, the screen will display as below :



Digital Photo Frame

Settings

Default

Touch the default item to reset the system to its factory default settings.

EXIT

Touch EXIT to return to the previous menu.

Note: When the touch panel is invalid, please calibrate the screen.

Screen calibration

In the main menu, press the RIGHT button on panel board to select the SETTINGS icon, then press ENTER button on the panel board to access the below menu:



Press the RIGHT button on the panel board to select others item, and press ENTER button to enter into the next menu. Continuously press the RIGHT button on the panel board for five times to access the below menu:



Digital Photo Frame

Settings

Press the RIGHT button on the panel board to select screen calibration, then press ENTER button on the panel board to access the below menu:



A "+" will appear on the left up corner, touch the center of the "+"; then, the "+" will move to the right up corner of the screen, touch it again, the "+" will move to right down corner, left down corner and center of the screen in the order, touch it in order. Now, you finish the calibration.

 
Note: When you touch the "+", please try to touch it as quickly as possible, it may be taken as two times touch, the "+" will not appear in order. If it happens, please start the calibration again.

EXIT

After calibrating screen, the frame will return to the previous menu.

Calendar & Clock

In the main menu, select CALENDAR & CLOCK device and touch it to enter the CALENDAR/ CLOCK screen.

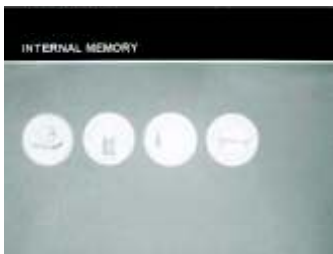

Digital Photo Frame


Calendar & Clock

Viewing the Calendar and Clock

In the CALENDAR/CLOCK menu, touch "right arrow" or "left arrow" on the top left box to set the year and press "right arrow" or "left arrow" in the second box to set the month.




Calendar/Clock Settings

In the CALENDAR/CLOCK screen, touch  to enter the CALENDAR /CLOCK SETTINGS screen.



CALENDAR SETTINGS


Touch the "left arrow" or "right arrow" of the first box to set the year. Touch "left arrow" or "right arrow" of the second box to set the month. Touch the date item to set the date. Touch  under the date table to save the new settings.




Digital Photo Frame

Calendar & Clock

Clock settings


Touch "up arrow" or "down arrow" of the first box under CLOCK (HH:MM) to set the hour. Touch "up arrow" or "down arrow" of the second box to set the minute. Touch  to save the new settings.

Alarm settings

Touch the "left arrow" or "right arrow" of the first box under the ALARM (HH:MM) item to switch the alarm to off or on. Touch the "up arrow" or "down arrow" of the second box under the ALARM(HH:MM) item to set the hour of the alarm. Touch the "up arrow" or "down arrow" of the third box under the ALARM(HH:MM) item to set the minute of the alarm. Touch  to save the new settings.



Exit

Touch  to return to the previous menu .

Alarm

When it is the time to alarm, the screen will display as below:



Exit

Touch the screen to return to the main menu.



Chapter 5

ASSP Guide

How to start ASSP	33
Introduction for the Interface of ASSP	35

Digital Photo Frame

ASSP Guide

Note: While connecting the frame to PC, please make sure the frame is in main menu and don't operation the frame.

ASSP is used to manage the file in the Internal Memory of the frame, it can switch the resolution of the photo higher than 800x600 to 800X600(at least the width is 800 or the height is 600) photos and delete the photos.

 
How to start ASSP

When connect the frame to your PC, there are several ways to start ASSP.

1.If your PC have started the auto-play function ,the following screen will appear ,select the item Image Viewer, press OK to confirm .




2.Select the corresponding removable disk "Internal Memory" for the internal memory of the frame.

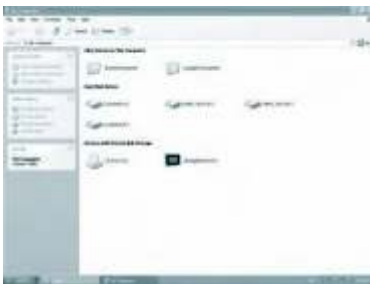

Digital Photo Frame

ASSP Guide

 3. Click the disk “Internal Memory” to access it , select the file named “ Image Viewer” .

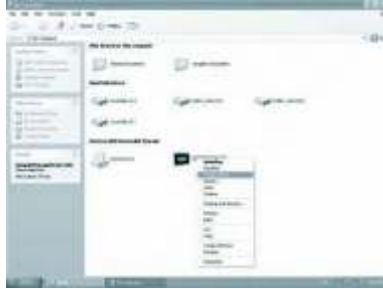

4. Double click the file named “ImageViewer.exe”

Remarks: Some of the PC installed the Anti-Virus or the other Holding Up Software, they will make the “autorun.inf” invalid. In this situation, the file is hidden file, please set your PC to display all hidden files.



Digital Photo Frame

ASSP Guide

Introduction for the interface of ASSP



- A) While selecting different photos in the file list, the preview photo and information will display on the right of the window. (Width, Height and Size).
- B) Total Size and Free Size will also display.
- C) Click "Resize" to convert the photo size to 800x600(Pixel) and save as JPG format.
- D) Click "Delete" to delete the files in the address column.
- E) Click "Add Image" to add the photos from your PC to the current directory, or you can directly draw the desired file to the file list, the photos size will convert to 800x600(Pixel) automatically.





Chapter 6

Customer Service

Question & Answer	37
Troubleshooting	38
Specifications	39

Digital Photo Frame

Question & Answer

Question	Answer
What photo and music formats are supported by the Photo Frame?	Photo: JPG, BMP, PNG, TIFF Music Movie: MPEG-4(avi) E-Book: txt
Can I set up the alarm ?	Yes , you can set up the alarm in the submenu of CALENDAR & CLOCK .
Why player does not display picture quickly after inserting memory card?	If your picture is high quality, please wait a minute. Or switch your picture by using the ASSP tool.
Can I insert multiple memory cards?	Yes, you can insert one of SD, MMC, MS,XD and CF at the same time.
Why picture does not cover the entire screen?	The picture whose rate is 4:3 and resolution is 800(RGB)x600 or higher than 800(RGB)x600 can cover the entire screen.
What is the best Picture resolution displayed on the screen?	The frame's best resolution is 800(RGB)x600.
Why won't it advance to next picture?	<ol style="list-style-type: none"> 1. There is only one picture in the frame. 2. You are viewing high-resolution pictures in the card, High-resolution pictures can take some time to display. Please switch your picture by ASSP tool, if you want to display the picture quickly. 3.The frame is in step show mode, please touch the SLIDESHOW item on the screen to enter into slideshow mode. 4. The next picture has been corrupted.
Can I rotate a picture on the screen?	Yes. During step show mode, touch the ROTATE item to rotate the photo anticlockwise. Note: The rotated picture will return to its original orientation after you power down the digital frame.
Why Digital Photo Frame does not play movie?	In order to smooth video playback, the resolution 640x480 is recommended. It is best to restore the movie into the frame.
Why Digital Photo Frame does not read E-Book?	The frame only can read the ansi format TXT file.
Why the touch panel does not work?	Please see the screen calibration of the SETTINGS.

Digital Photo Frame

Troubleshooting

Some simple checks or a minor adjustment eliminate common problems:

No power

1. Check the power button is on.
2. Check the power outlet is operational.
3. Check the power cord for damages
4. Check the power plug is firmly connected to photo frame.

Can not read the card

1. Check the card for damages.
2. Check the card is connected yo the photo frame correctly.
3. Pull out the card, and then insert again.

Photo Frame is not working

Turn off the power, and then turn it on again.

The remote control is not working:

1. Check that the battery is properly installed.
2. Check that the battery “protective plastic” is pulled out.

Digital Photo Frame

Specification

Specifications

Display: 8" TFTLCD 800(RGB) X 600 (4:3)

Internal memory: 512MB

Power: AC Adapter; Input 100-240V; Output 5V, 2A

Environmental operating ranges

Operation: 32~95 F, Humidity 0~85%

Storage: -4~140 F, Humidity 10~90%

Accessories:

Power Adapter

User's Manual

Quick-Start guide

USB Cable

A wooden frame

Digital Photo Frame

FCC and Safety Information

• FCC Part 15.19

This device complies with Part 15 of the FCC Rules .Operation is subject to the following two conditions: (1) this device may not cause harmful interference , and (2) this device must accept any interference received ,including interference that may cause undesired operation .

• FCC part 15.21

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

• FCC part 15.105

Note : This equipment has been tested and found to comply with the limits for a Class B digital device ,pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation .This equipment generates, uses, and can radiate radio frequency energy and ,if not installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular installation .If this equipment does cause harmful interference to radio or television reception ,which can be determined by turning the equipment off and on ,the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different form that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

LIMITED WARRANTY

The limited warranty set forth below is given by Sungale Group Inc. ("SGI") with respect to Sungale brand DPF players and other consumer electronics products purchased and used in the United States of America. SGI warrants this product against defects in material or workmanship as follows:

LABOR: For a period of ninety (90) days from the date of purchase, if this Product is defective, SGI will repair or replace the Product, at its option, at no charge. After this ninety (90) days period up to one year, a labor charge of US\$30.00 will be charged for each service.

PARTS: For a period of one year from the date of purchase, SGI will supply, at no charge, new or rebuilt replacement parts in exchange for defective parts. After this one year period, SGI will charge the new or replacement parts.

This warranty does not cover: (1) customer instruction, installation or set up; (2) cosmetic damage or damage due to accident, misuse, abuse, or negligence; (3) commercial use of the Product; (4) modification of any part of the Product; (5) damage due to improper operation, improper maintenance, or connection to an improper voltage supply; (6) damage due to an attempted repair of the Product by anyone other than a facility authorized by SGI to service the Product; (7) consumables (such as fuses and batteries). This warranty is valid only in the United States.

The product must be accompanied by a copy of the original retail purchase receipt. If no proof of purchase is attached, the warranty will not be honored and repair cost will be charged.

This warranty is valid with attach written documentation detailing the complaint to the outside or inside of the carton.

This warranty is invalid if the factory applied serial number has been altered or removed from the Product.

SGI reserves the right to modify any design of this product without prior notice.

To obtain warranty service, you must deliver the product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, plus proof of purchase, to:

Service Center
13358 Monte Vista Avenue,
Chino, CA 91710
Tel: **800-473-5156**

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SGI SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Digital Photo Frame

Sungale