


Sungale

1.5 inches Key Chain Digital Photo Frame
User's Manual

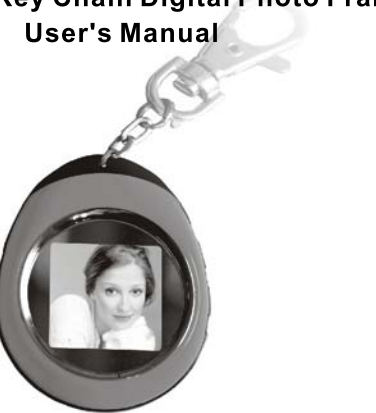

1

Thank you for purchasing the product. While you may find it cute, this product is also powerful, allowing you to download and display many of your favorite photos. This product can be taken with you wherever you go.

Functions:

- Slide Show
- Automatic Shut Down
- Time & Date Clock
- USB Device to be connected to your PC for file management
- Built-in battery

Buttons and Functions

- Directional Key: Located on right side of the keychain
- Menu Key: Middle button on the right side of the keychain
- Reset Button: Located on the left side of the keychain, above the USB

Keychain Operation:

- Power on: To turn the keychain on, hold the menu key for 5 seconds.
- Scroll through your photos by clicking the Directional Key.

To adjust settings, press the Menu key. Use the Directional Key to select the setting you would like to change, then press the Menu key to adjust that setting. Use the Directional Key to adjust the setting and press the Menu key again to apply your settings.

To exit the Menu, use the Directional Key to go to Exit, then press the menu key.

When the battery is low, the screen will display "Low Battery." To charge the Keychain, plug your keychain into a PC via USB cable included.

In slide show mode, hold Directional Key for about 5 seconds, Time will be displayed on the screen.

To manually power-off your Keychain, hold the Menu key for 5 seconds.

2

Downloading Pictures to the Keychain:

1. Connect your Keychain to the computer with the USB cable.
2. Press the Menu key on your Keychain to go to the Main Menu. Select USB Connection from the list of options and press Menu key. Select "Yes" and press Menu key a final time.
3. On your PC, the photo viewer should automatically appear.
4. Find the photo you want to store in your keychain.
5. You can adjust the way your photo will be displayed by clicking the different keys, such as RotateL, RotateR, +, - and clear.
6. Click Add in the middle of the screen.
7. When you have selected all the photos you want to store in your keychain, click Download (Keychain can hold up to 43 Photos).
8. Click Exit to exit the photo viewer.
9. Disconnect the USB cable. Your pictures are now available to view on your Keychain.

3

Deleting Pictures:

1. Find the picture you would like to delete by using the Directional Key.
2. Press the Menu key and go to Delete One. Press the Menu key and the picture you have selected will be deleted.
3. To delete all the pictures at once, go to Delete All from the Main Menu and follow the same procedure as above.

Deleting/Saving Pictures With Your PC

1. Plug your Keychain into your PC using the USB cable.
2. Press Menu key on your Keychain and go to USB Connect. Select "Yes" using the Directional Key and press Menu key.
3. On your PC, your photo viewer should automatically appear.
4. Select the picture you would like to delete and click Delete from the options above the pictures.
5. Click Download, and that picture or pictures will be deleted from your Keychain.
6. Select the picture you would like to save and click save or save all to save on your PC from your Keychain.

4

FCC Part 15.19

This device complies with Part 15 of the FCC Rules .Operation is subject to the following two conditions: (1) this device may not cause harmful interference ,and (2) this device must accept any interference received , including interference that may cause undesired operation .

FCC part 15.21

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

5

FCC part 15.105

Note : This equipment has been tested and found to comply with the limits for a Class B digital device ,pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation .This equipment generates, uses, and can radiate radio frequency energy and ,if not installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular instructions. If this equipment does cause harmful interference to radio or television reception ,which can be determined by turning the equipment off and on ,the user is encouraged to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different form that to which the receive is connected.
- Consult the dealer or an experienced radio TV technician for help.

6

