

Sungale

JC153

1.5 inch Key Chain Digital Photo Frame User's Manual



1


Thank you for purchasing the product. While you may find it cute and compact, this product is also powerful, allowing you to download and display many of your favorite photos. This product can be taken with you wherever you go.

Features:

- Slide show
- Automatically shut off
- Clock function
- USB port for fast file transfers
- Built-in rechargeable battery

Buttons:

- UP/ DOWN Buttons located on the bottom of the back of the key chain. Press to select item.
- MENU Button located on the bottom of the back of the key chain. Press to enter or exit item.
- RESET Button located on the bottom of the back of the key chain. Press to reset all settings and files in the internal memory.

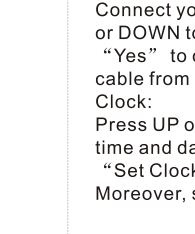

Power On/Off:

Power On: Hold the MENU button for two seconds, or connect your key chain to the computer with the USB cable, and then enter the photo slide show automatically.

Power Off: In the slide show mode, hold the MENU button for two seconds, or press the MENU button and enter the Main Menu mode to select the OFF, and then press the MENU button.

Main Menu:



In the slide show mode, press the MENU button, and then enter the Main Menu mode.

Connected to PC:

Connect your frame to PC with USB cable. Press UP or DOWN to select "Connected to PC", and select "Yes" to complete connecting. Remove the USB cable from PC to disconnect.

Clock:

Press UP or DOWN to select "Clock", then select "Display Clock" to show time and date, select "Analog Clock" to show a clock-analog, and select "Set Clock" and use UP/MENU/DOWN to set the correct time and date. Moreover, select "Cancel" to exit.

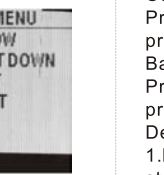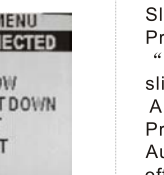

2

Slide Show:

Press UP or DOWN to select "Slide Show", select "On" and press "UP/DOWN" to adjust time space of slide show, then press MENU to begin slide show. Select "Off" to enter step show, and select "Cancel" to exit.

Auto shut down:

Press UP or DOWN to select "Auto Shut Down", then select "On" to set Auto Shut Down, press UP/DOWN buttons to select the desired time of turning off the key chain. Select "Cancel" to exit.

Contrast:

Press UP or DOWN to select "Contract", press MENU to enter, and then press UP or DOWN to adjust the contrast, press MENU again to exit.

Back Light:

Press UP or DOWN to select "Back Light", press MENU to enter, and then press UP or DOWN to adjust the back light, press MENU again to exit.

Delete:

1. Find the photo you would like to delete by using the UP/DOWN buttons in step show mode.

2. In the Main Menu mode, press UP/DOWN to select "Delete", enter the item and go to Delete One. Press the MENU key and the picture that you have selected has been deleted.

3. To delete all the pictures at once, follow the same procedure as above and go to Delete All.

3

Off:

Press UP or DOWN to select "Off", press MENU to enter, and then turn off the key chain.

Language:

Press UP or DOWN to select "Language", press MENU to enter, and then select English or French to change language, select "Cancel" to exit.

Exit:

Press UP or DOWN to select "Exit", press MENU to exit.

Downloading Photos to the Keychain with PC:

1. Connect your keychain to PC with the USB cable.

2. Press the MENU button on your keychain to go to the Main Menu. Select "Connected to PC" from the list of options and press MENU key. Select "Yes" and press the MENU button to complete connecting.

3. On your PC, the DPF Mate should automatically appear.

4. Find your desired photo from "My Computer" or "Desktop" to store in your keychain.

5. You can adjust the way your photo will be displayed by clicking different keys, such as +, -, RotateL, RotateR, or click the photo to move it directly, and then clear.

6. Click Add to add the given photo into the digital frame document in the right side.

4

7. When you finished selecting all the photos that you want to store in your digital frame, click Download (It can hold up to 50 Photos)

8. When you select a piece of photo, you can click "Setting" to adjust the font color and background.

9. Click Exit to exit the PDF Mate.

10. Disconnect the USB cable. Your photos are now available to view on your keychain.

Deleting/Saving Photos with PC:

1. Plug your keychain into your PC using the USB cable.

2. Press the MENU button on your keychain to go to the Main Menu. Select "Connected to PC" from the list of options and press MENU key. Select "Yes" and press the MENU button to complete connecting.

3. On your PC, the DPF Mate should automatically appear.

4. Select the photo you would like to delete and click "Delete" from the options above the pictures.

5. Click Download, and the photo(s) will be deleted from your keychain.

6. Select the photo you would like to save and click "Save" or "Save All" to save on your PC from your keychain.

5

FCC Part 15.19

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

6

FCC Part 15.105

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular instructions. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.