

Sungale

MODEL:PF1023


Quick Start Guide



QUICK START GUIDE

Navigation Controls

The components may differ slightly in appearance with the provided images.

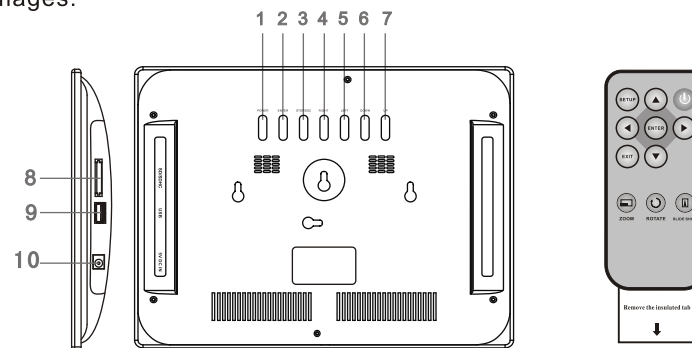

MEANING:

1. **POWER:** Press to turn on or turn off the DPF player.
2. **ENTER:** Press to enter/confirm; Press to pause when slideshow pictures and press again to continue slideshow.
3. **STOP/ESC:** Press to exit or return.
4. **RIGHT:** Press to move cursor right.
5. **LEFT:** Press to move cursor left.
6. **DOWN:** Press to move cursor down.
7. **UP:** Press to move cursor up.
8. **SD/SDHC:** Insert one of the SD/SDHC cards each time.
9. **USB:** Insert a USB flash disk.
10. **5V DC IN:** Insert the power adapter to connect the unit with power outlet.

Remote control:

SETUP: Press to set up picture display.

Navigation buttons

- ◀ : Press to move cursor left or rotate left 90° when display picture in full screen.
- ▶ : Press to move cursor right or rotate right 90° when display picture in full screen.
- ▲ : Press to move cursor up or to the last picture.
- ▼ : Press to move cursor down or to the next picture.

1

QUICK START GUIDE

Enter: Press to enter/confirm; Press to pause when slideshow pictures and press again to continue slideshow.

⏻ : Press to turn on or turn off your DPF player.

EXIT: Press to exit.

ZOOM: Press to zoom picture when slideshow pictures.

ROTATE: Press to rotate picture when slideshow pictures.

SLIDE SHOW: Press to turn slideshow off or slideshow pictures directly except in thumbnail pictures mode and Edit mode.

Note: Please remove the red tab to activate remote control battery.

Getting Started



Connecting your DPF machine with power by using the power adapter provided. The DPF machine will start up and go to main menu.



After about 10 seconds without any operation, the DPF machine will auto slideshow pictures in the internal memory.

Press "EXIT" on remote control to the main menu.


2

Loading photos from memory card or USB

Insert one of the SD/SDHC card to your digital photo frame by following the direction showed as below:

You can also insert a USB flash disk which has pictures to the USB slot to play pictures stored in the USB.

The digital photo frame will auto slideshow pictures in your card or USB which has been inserted.

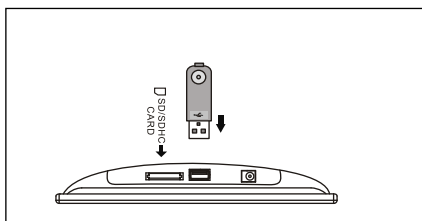

Keep pressing EXIT button on remote control to exit to the main menu.

Setup

There are two ways to go to Setup mode:

1. Press **▶** to move cursor to SETUP and press ENTER to enter the setup interface.
2. Press SETUP button on remote control to setup interface directly.



There will be 5 icons listed at the left side. From top to bottom, they are Photo setting, auto play, display setup, Custom setup and exit respectively.

You may press **▼** button to select one of the icons, and press **▶** to enter the detailed setup options (press **◀** to return), then press **▲▼** to choose what you want and press ENTER button to confirm the settings.

What you can setup

You can setup slideshow interval time, transition effect, show type in fit screen or full screen, browse in thumbnail mode or file manager mode, photo auto play or not, brightness and contrast, TFT Saturation, OSD language, play repeat mode and restore all of the settings to original state by selecting "Default".

Keep pressing EXIT button to go to the main menu interface.

Calendar and Clock

Press **▶** to move cursor to "Calendar" and press ENTER to confirm. Then you will enter the interface with 3 options: Display, Set Date and Exit.

Press ENTER to display calendar directly.

Press **▼** to select "Set Date" and press ENTER to enter. Then press **◀▶** to move cursor and press **▲▼** to change the numbers. Press ENTER to confirm after setting.

Press EXIT button to go to the main menu interface.

You may follow the same steps to setup clock.

Edit

Press **▶** to select "Edit" and press ENTER to the interface with 3 options: Copy, Delete and Exit.

You will enter into the interface with 3 options: Copy, Delete and Exit.

Delete pictures in your internal memory

If you haven't inserted a memory card, when you select "Copy" icon and press ENTER, it will not work and auto go to main menu. At this situation you can only delete pictures from internal memory. Even if you have inserted a memory card and then select "Delete", you can only delete pictures in internal memory and you can't delete pictures in the memory card.

Copy pictures from memory card to internal memory

If you have inserted a memory card, you can select the copy icon and press ENTER to enter the memory card file list. Press **▼** to select the pictures that you want to copy and then press ENTER to confirm your selection, there will be a square around the selected pictures. After selecting the pictures that you want to copy from memory card to internal memory, press **▶** button to select "Exit" and then **◀** button to select "Save", and press ENTER button to confirm. Then the pictures will be pasted to the internal memory.

Note: The DPF internal memory can only store around 10 pictures at most. If you have 10 pictures stored in the DPF internal memory, then you can't copy any more pictures from memory card to DPF unless you delete some pictures in the internal memory.

Press EXIT button to go to the main menu interface.

Favorite

Press **▶** to select "Favorite" and press ENTER to slideshow pictures in internal memory only.

Support

If you encounter an issue, resolve the issue in the following order.

1. Refer to the User's Manual.

- You can download the User's Manual from the support web site: www.sungale.com to your computer.

2. Visit the support site.

- For manual download and FAQs: www.sungale.com

3. Contact Sungale Support.

- Toll Free Call in the USA: **800-473-5156**
- Service email: info@sungale.com