

QUICK START GUIDE

MODEL: PF809

Know your Netchef



NetChef™ is a touch screen operating device, you can easily find the functions on the screen, then, touch it to get the features.

With hi-resolution screen (800x600), NetChef™ can display all finest images. Built-in 2GB memory for you to store all your favorite recipes, and external memory can be expanded up to 32GB.

NetChef™ links to internet wirelessly, what you need to do is to plug the cable into the power socket, then, select your private router on the screen, then, it will be linked to internet.

This is a networked recipe with up to 500 recipes preloaded, and the content can be updated via cloud technology constantly.

Timer and Unit Converter are available on the bottom of every recipe pages to assist your cooking.

Initial Experience

Power your Netchef with the included adaptor. Press on the Power button, Welcome Page will appear on the screen, then, Netchef begin booting, it needs about 50s. When booting finished, the below screen will appear, and the surrounding green words are illustrations.



1	Home	6	6:22PM	Time
2	Menu	7	Volume Down	
3	Search	8	Volume Up	
4	PC Connecting Indicator	9	Back	
5	Wifi connection Indicator	10	More functions	

11 Touch on this green area, move up and down your finger, you will find more sortations.

12 Touch on this red area, move up and down your finger, you can get more apps, touch on the "+" mark, you can add apps to you Netchef.


» When you press on a category of the recipes, the aggregation of the recipes from the online database will persevere for about 20 seconds, during the aggregating, if you press on any single recipe, it may come out with some delay.

Link to Internet


For networked functions, such as online recipes, cooking APPs, browser..., you need to link to internet firstly. Please operate as follow steps to setup your network.

» Starting from the main menu,


1. Touch “WifiSetting”,
2. Touch “Wi-Fi” and “Wi-Fi setting” on next line,

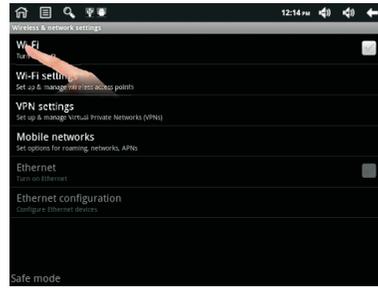

3. Your Netchef will search wireless routers in your surrounding, and your router will appear on the screen, touch on Your Router.

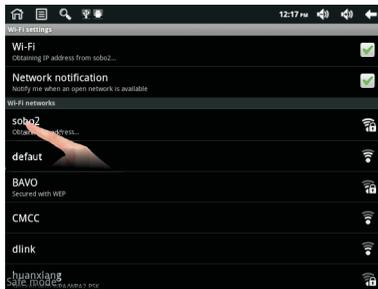


4. If you did not set a password for your router, the Netchef will link to internet automatically. If you have set a password for your router, the below square will appear on screen, touch on the Password bar,

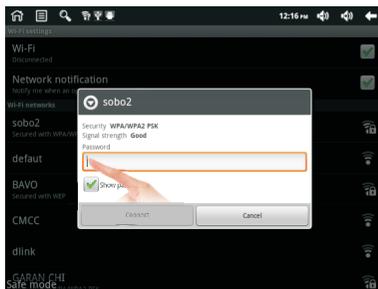

5. Soft Keyboard will appear on screen, input the password you set for your router, then, touch “Connect” on the screen,



» Now, you can see your router has been connected, which means your Netchef has been linked to internet.

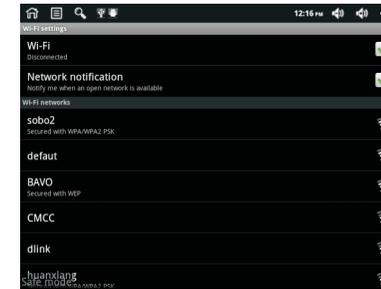

» Now, you can enjoy all networked functions.

Support

If you encounter an issue, resolve the issue in the following order.

1. Refer to the User's Manual.

- Go to www.sungale.com and click “Support”, then click “Manual Download” at the left side. You will find user manual with related model number (PF809). Click “Manual Download-EN” to download the user manual

2. Visit the support site.

- For manual download and FAQs: www.sungale.com
- More supports about WIFI: www.sungalewifi.com

3. Contact Sungale Support team

- Toll Free Call in the USA: 800-473-5156
- Service email: info@sungale.com

4. Follow Netchef on Twitter:

- @Netchef_Sungale, http://twitter.com/#!/Netchef_Sungale

5. Follow Netchef on Facebook:

- Netchef_Sungale, <http://www.facebook.com/pages/Netchef/139698189448741>