

Receive up to 45 popular TV channels, watch up to 700 programs in VOD format, stream videos from the most popular video or movie websites, listen over 10K radio stations, Browser, Map, Game, Education, News, Social Media..., all in one, all free, this is Cloud TV Box.

## 1 Necessary Surrounding:

- 1) Internet access necessary. For best performance, a connection speed no less than 6 Mbps is recommended. Wi-Fi capacity is built-in.
- 2) It is recommended strongly to connect the Cloud TV Box to your TV set via a HDMI cable. RCA/Component out is also available, but will not produce a HD output.

## 2 Setup Steps:

- 1) Connect the Cloud TV Box to your TV set with the included HDMI cable.
- 2) Plug the power adaptor into an outlet, and plug the output end into the Box.
- 3) Use the TV remote to set your TV's input as HDMI.
- 4) Press power button on the front side of the Box, you will see Start-on Logo, and booting prompt on your TV screen. Approximately 50 seconds later, you will see the home page of the Box.
- 5) Put battery into the wireless mouse, take out the nano receiver from the bottom of the mouse, and then, plug the receiver into one of the USB ports on the Cloud TV Box. (See below figure)



- 6) Click and move the mouse, you will see the cursor on the screen. Click on the “Wi-Fi” button on the bottom of the screen, then, following the prompt on the screen, select your wireless network and input your password (click on the input area, a virtual keyboard will appear). Finally, click on “Connection” to link to internet.



- 7) Continuously right click to get back the home page, then you can select the programs you want to watch.

## 3 Tips:

- 1) All operations can be performed with using the packed remote controller. The wireless mouse will make using Cloud TV easier.
- 2) In case the display area does not fit your television screen, please click on “All Apps” → “Settings” → “Display” → “Display Position”, then, on the right up corner of the screen, you will see a group of arrows. Click the arrows to adjust the display area. (See below figures)



 \*In different version of firmware, the “All Apps” can appear as “Internet World”.

- 3) The default output of the Box is HDMI. In the event your TV does not have a HDMI port, please click “All Apps” → “Settings” → “Display” → “Output mode” → “480i” or “576i” to reset the output mode.
- 4) Right clicking on the mouse will return you to the previous interface.
- 5) Using the included wireless mouse dramatically improves usage. It only takes a few minutes of practice to master.