

**Sungale**



# Digital Photo Frame User Manual



**3.5**

# Contents

## User Notice

---

This product has met all electronic emission standards. This product may be used safely in the home.



## Chapter 1 Introduction

---

Production introduction	3
Safety Precautions	4
Basic Features	8
Parts and Components	9

## Chapter 2 Connection

---

Power Connection	13
PC Connection	14

## Chapter 3 Usage

---

Photo	16
Music	18
Movie	19
E-book	20
Calendar	22
Setup	23

## Chapter 4 Customer Service

---

Questions and Answer	26
Troubleshooting	27
Product Specifications	28



# Introduction

---

<b>Production introduction</b>	<b>3</b>
<b>Safety Precautions</b>	<b>4</b>
<b>Main Features</b>	<b>8</b>
<b>Parts and Components</b>	<b>9</b>
Basic Components	9
Electronics Frame	10

## Product Introduction

This **Sungale** Digital Photo Frame is a convenient album that keeps your favorite memories at your fingertips.

With its bright and vivid LCD screen, the **Sungale** Digital Photo Frame offers an alternative to photo printing, adding a new level of convenience to your life.

With its diverse file management functions, the **Sungale** Digital Photo Frame allows you to relive your cherished memories anytime.

## Safety Precautions

Make sure to review the following guidelines to ensure user safety and avoid product failure.

### Electric Safety

**⚠ WARNING:** Indicates information that, if neglected, could result in serious injury or death.

**⚠ CAUTION:** Indicates information that, if neglected, could result in injury to the user and/or product damage.

01. Use only the authorized power supply accessory. Failure to do so could result in product malfunction.



 
02. When connecting your Digital Photo Frame to a power source, make sure that your hands and feet are free of moisture. Failure to do so could result in electric shock.



## Safety Precautions

Make sure to review the precautions to ensure user safety.


03. Make sure that the power supply is firmly plugged in and not loose. Failure to do so could result in electrical shock.

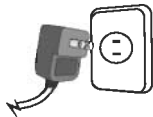

04. Do not let the power cord get overly entangled and do not place any heavy objects on the cord. Failure to do so could result in electrical shock.



 05. Do not connect the power supply to an electrical power strip with other various connections. Failure to do so could result in fire.

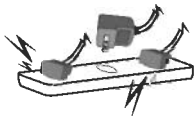

06. Disconnect the power supply during inclement weather conditions that include thunder and lightning. Failure to do so could result in fire.



## Safety Precautions

**Make sure to review the following guidelines to ensure user safety and avoid product failure**

### Product Related

 
01. Dropping the product, or subjecting it to a jolting impact can cause critical damage to the unit.



02. Spilling any liquid on the unit can cause critical damage to the unit.



03. Striking or scratching the LCD screen may cause permanent damage to the screen.

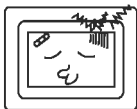


04. When cleaning the LCD screen, unplug the unit and wipe it gently with a soft cloth.




## Safety Precautions

 **Make sure to review the following guidelines to ensure user safety and avoid product damage.**

05. Subjecting the product to severe humidity and/or heat can cause product malfunction.

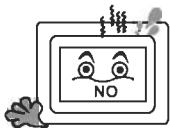

 06. Turn the power off before connecting or disconnecting the power supply.

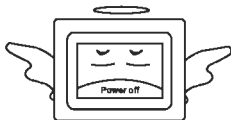



### Main Features

1. Three-in-one functions photos browser ,movie player, music player
2. On board 128MB memory ,store your photos /movies directly
3. Slide show ,step show
4. USB Device to be connect to your PC for file management.
5. Calendar, Clock
6. Built-in battery

## Parts and Components

As Sungale is constantly working to improve its products' performance, these components may be modified without notice.

The components may differ slightly in appearance with the images provided.

### Basic Components

These components are included with your product.



Digital Photo Frame



User Manual



Power Adaptor

 


USB Cable

## Part Names

The components provided may differ in appearance with the images provided.

### Electronic Frame:

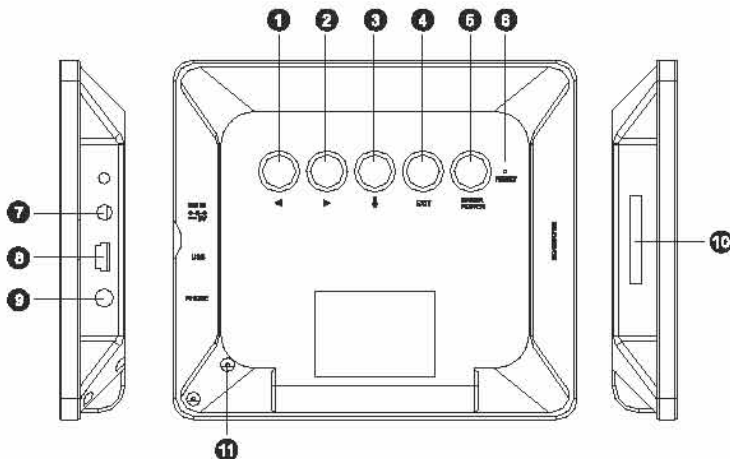

## Main Features and Basic Operations

### Rear Side

1. ◀ : Press to move to the previous chapter.
2. ▶ : Press to move to the next chapter.
3. ↓ : In the main menu screen , press to shift between the device and card icons.  
In the photo browse mode , press the button momentarily to skip to the next page ,  
hold to skip the previous menu.
- 4.EXIT : Press to exit the current page.
- 5.ENTER/POWER : Hold the button to turn on/off the DPF , press the button momentarily to  
enter/confirm.
6. RESET : Use a thin stick to insert to the hole and press to reset your DPF.

### Left Side

- 7.DC IN: Insert the DC power adaptor to the DPF player .
- 8.USB Device: Connect to the USB cable from the DPF to PC.
9. PHONE: Insert for earphone use.

### Right Side

- 10.SD/MMC/MS: Insert SD/MMC/MS card.

### Rear Side

11. Stand: Using the stand provided to stand the player horizontal.



**Chapter 2**

## **Connection**

---

 
**Power Connection**

**13**

**PC Connection**

**14**

### Power Connection

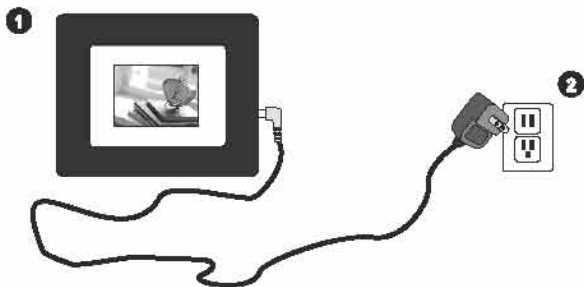


1. Connect the power adapter to the DC IN 5V Jack on the DPF
2. Plug the AC Adapter to a power jack to supply power to the DPF and charge for the built-in battery.

**Note:** If there is power in the built-in battery, you can use the player directly.

## PC Connecting
 
### Connecting your DPF to your PC

Use the supplied USB cable to connect your DPF to your PC.

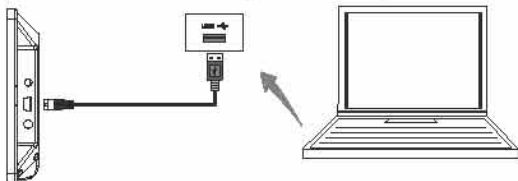

1. After connecting your DPF to the PC, your PC should display a window similar to the one shown below.
2. Choose "Open folder to view files..." and click "OK". Your PC will display the contents of your memory.
3. With your DPF files on display, you may copy documents and move them to your PC, delete items from your DPF's memory, or paste files on your PC into your DPF's memory. Right click the desired items to find these options.
4. When you are finished managing your files, click the "Safely Remove Hardware" icon on your toolbar and confirm the operation.
5. When your PC says you may remove your hardware, unplug the USB cable from your PC, and resume use of your DPF.





## Chapter 3

## Usage

---

Photo	16
Music	18
Movie	19
E-book	20
Calendar	22
Setup	23



## Photo

### Viewing photos in Full screen

From the main menu, press ► or ◀ to select the Photo icon , press ENTER to view the photos in slide show mode.



### Viewing a photo in multi-screen

During photo playback, press EXIT to preview the photos in multi-screen, press ► or ◀ to select the previous or next photo . In the photo browse mode , press ↓ momentarily to skip to the next page ,hold to skip the previous page.



## Photo

### **Playing/Pausing the photo**

During photo playback, press **ENTER** to play/pause playing the photos.

### **Copy the photo**

After inserted the memory card , the screen will display “ **CARD IN** “. Select the desired card Icon from the main menu , press **ENTER** to enter the card screen. Select the Photo icon and press **ENTER** . In photo step show mode, select the photo to be copied, press **↓** to copy the photo to internal memory.

**Note:** You can only copy the photos from your memory cards to the internal memory of your DPF.

# Music

## Music

### Locate the Music Directory

From the main menu, press **▶** or **◀** to select the Music icon and press **ENTER** to enter the music directory .



### Selecting a music

Press **▶** or **◀** to select the desired music file , press **ENTER** to play.

### Playing/Pausing the music

During play back ,press **ENTER** button .

### Adjusting the volume

During music playback, press **▶** to turn up the volume, press **◀** to turn down the volume.

### Music EQ mode/Circle mode

During music playback, press **↓** momentarily to turn enter the EQ mode; hold the button to enter the Circle mode to play the music circularly.

# Movie

## Movie

### Select the Device Directory

From the main menu, press ► or ◀ to select the **Movie** icon and press ENTER to enter the movie list .



### Selecting and Playing Movies

Press ► or ◀ to select the desired movie and press ENTER to play the movie file.



**Note :** Only AVI formatted video files with bit rate under 30fps can be played.

### E-Book

**Note :** This frame is only compatible with TXT formatted text .  
From the main menu, press ► or ◀ to select the E-Book icon, press ENTER to enter the E-book file list .



## E-Book

Select the desired file from the different folder (Last Read/Main Directory) and press ENTER to enter the TXT book reading screen .



Press ◀ to go to the previous row, press ▶ to go to the next row ; Hold ↓ to go to the previous page, hold ↵ to go to the next page.



In the TXT format E-Book reading screen, the default reading mode is Manual Mode, Press ENTER to change to the Auto Mode, press ↓ to change the Reading interval (5s/10s/15s/30s/45s/60s).If you want to save the current reading page , you should press EXIT to exit to the main menu.

## Calendar

### Calendar

From the main menu, press ► or ◀ to select Calendar icon , press ENTER to enter the calendar screen .



Press ► to go to the next day, press ◀ to go to the former day.

Press ↓ momentarily to go to the next month; hold the button to go the former month.

Press ENTER to set for the current date .

## Setup

### Setup

From the main menu, press ► or ◀ to select Setup icon , press ENTER to enter the setup menu.



### Language

From the setup menu, press ↓ to select Language , the only display language is English.

### Brightness

From the setup menu, press ↓ to select Brightness, press ► or ◀ to set the brightness for 1/2/3/4/5, press EXIT to save the setting.

### Auto off

From the setup menu, press ↓ to select Close Time, press ► or ◀ to set the close time for 0 Min-----120 Min, press EXIT to save the setting.



### **Current hour**

From the setup menu, press ↓ to select current hour, press ► or ◀ to set the current hour for 0 hour----23hour , press EXIT to save the setting.

### **Current minute**

From the setup menu, press ↓ to select Current minute, press ► or ◀ to set the current minute for 0 Min----59 Min , press EXIT to save the setting.

### **Slide Time**

From the setup menu, press ↓ to select Slide Time , press ► or ◀ to set slide show time to (5 Sec/15Sec /30Sec/1 Min/60 Min) ,press EXIT to save the setting.

### **Slide Mode**

From the setup menu, press ↓ to select Slide Mode , press ► or ◀ to set slide show effect to (Random/Left\_to\_Right/Right\_to\_Left/ Top left\_ Bottom right/Zoom Out /Vexpand\_Middle/Door\_Open/Blind Horizontal/Blind Vertical), press EXIT to save the setting.

### **Repeat Mode**

From the setup menu, press ↓ to select Repeat Mode , press ► or ◀ to set repeat mode to (Repeat Off/Repeat Folder/Repeat All) ,press EXIT to save the setting.

### **Default**

From the setup menu, press ↓ to select Default , press ENTER to load default setting .



## Chapter 4

# Customer Service

Questions and Answers	26
Troubleshooting	27
Product Specifications	28

## Question and Answer

<b>Question</b>	<b>Answer</b>
What photo, music and video formats are supported by this Multi-media Digital Photo Frame?	Photo: JPEG ,BMP,GIF Music: Mp3 ,WMA,WMV,OGG Video: AVI (bit rate under 30fps)
Does the player have a built-in memory?	Yes. The player has a 128MB internal memory to store media files . Don't rename the memory' s name.
Can I insert multiple memory cards?	Yes, you can insert one of SD,MMC, MS card each time.
Why doesn't the picture cover the entire screen?	The resolution of the picture to cover the entire screen must be greater than 320x240 pixels.
Can the DPF player connect with all computers?	No. The USB port of the PC must be USB 2.0 and the PC must have Windows 2000 or above.

## Troubleshooting

If you are having problems with your unit, please consult the troubleshooting guide below. Some simple checks or minor adjustments may restore proper operation.

### **No Power**

Ensure that you are pressing and holding the power button for at least 2 seconds.

Ensure the power outlet is operational

Ensure the power cord is not damaged

Ensure the power plug is connected firmly to the outlet.

### **Unit NOT working**

Turn the unit off and then on again.

## Specifications

### **Product Specifications**

Audio File Formats : MP3,WMA, WMV, OGG

Photo File Formats: JPEG ,BMP,GIF

Video File Formats: AVI

Memory Cards Supports: SD/MMC/MS

USB Connection: USB2.0

Display panel: 3.5 "TFT LCD 320(RGB)\*240

Power: AC Adapter; Input 100-240V ; Output 5V, 1A (0.5A)

### **Accessories:**

AC Adapter

User Manual

USB Cable

- **FCC Part 15.19**

This device complies with Part 15 of the FCC Rules .Operation is subject to the following two conditions: (1) this device may not cause harmful interference , and (2) this device must accept any interference received ,including interference that may cause undesired operation .

- **FCC part 15.21**

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### • FCC part 15.105

Note : This equipment has been tested and found to comply with the limits for a Class B digital device ,pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation .This equipment generates, uses, and can radiate radio frequency energy and ,if not installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular instructions. If this equipment does cause harmful interference to radio or television reception ,which can be determined by turning the equipment off and on ,the user is encouraged to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different form that to which the receive is connected.
- Consult the dealer or an experienced radio TV technician for help.

# LIMITED WARRANTY

The limited warranty set forth below is given by Sungale Group Inc. ("SGI") with respect to Sungale brand DPF players and other consumer electronics products purchased and used in the United States of America. SGI warrants this product against defects in material or workmanship as follows:

**LABOR:** For a period of ninety (90) days from the date of purchase, if this Product is defective, SGI will repair or replace the Product, at its option, at no charge. After this ninety (90) days period up to one year, a labor charge of US\$30.00 will be charged for each service.

**PARTS:** For a period of one year from the date of purchase, SGI will supply, at no charge, new or rebuilt replacement parts in exchange for defective parts. After this one year period, SGI will charge the new or replacement parts.

This warranty does not cover: (1) customer instruction, installation or set up; (2) cosmetic damage or damage due to accident, misuse, abuse, or negligence; (3) commercial use of the Product; (4) modification of any part of the Product; (5) damage due to improper operation, improper maintenance, or connection to an improper voltage supply; (6) damage due to an attempted repair of the Product by anyone other than a facility authorized by SGI to service the Product; (7) consumables (such as fuses and batteries). This warranty is valid only in the United States.

The product must be accompanied by a copy of the original retail purchase receipt. If no proof of purchase is attached, the warranty will not be honored and repair cost will be charged.

This warranty is valid with attach written documentation detailing the complaint to the outside or inside of the carton.

This warranty is invalid if the factory applied serial number has been altered or removed from the Product.

SGI reserves the right to modify any design of this product without prior notice.

To obtain warranty service, you must deliver the product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, plus proof of purchase, to:



Service Center  
13358 Monte Vista Avenue,  
Chino, CA 91710  
Tel: **800-473-5156**

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SGI SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

DIGITAL PHOTO FRAME

**Sungale**