


Instructions

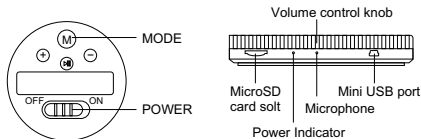

- Short press \oplus , it turns to next song, or hold it to volume up
- Short press \ominus , it turns to previous song, or hold it to volume down
- Short press ⏸ to pause or play
- Press Ⓜ to switch Bluetooth / MP3 / Audio in

Volume control knob

- Turn the knob in a clockwise direction to volume up
- Turn it in an anticlockwise direction to volume down

Mini USB port

Charge/audio input

Power Indicator

- Blue/Red: Working status
- Red: charging status (red indicator off when charged)

Basic

- Playing songs in MP3 format which saved in microSD card
- Support PC/iPod/iPhone/MP3/MP4/Other mobile phones by connection with Mini USB port
- Bluetooth play

Troubleshooting

- Failed to read microSD card, formatting microSD card or change the format of song to MP3.
- No audio input when connecting with other devices, press M button to switch it or shut down to reboot it.

Charging via cable

- Switch ON, and connect it with PC via USB cable, It will play songs during charging.
- Switch OFF, and connect it with PC for charging only.
- USB cable can not be used for data transferring.

Specifications

- Built-in Li-ion battery, 3.7V/500mAh
- USB charging voltage: DC 5V
- Speaker: 40mm 2.6ohm 3W
- Frequency range: 60Hz~18KHz
- S/N: >96db
- Distortion < 0.5%
- Size: 60x60x53mm

Cautions

- Keep out of reach of children.
- Never knock the speaker.
- Keep it away from fire, water, high and low temperature.
- Never block speaker nets.
- Never open it by yourself.
- Connect with USB cable for well searching station