

**Smart TV Box™**  
**User's Manual**



# CONTENTS

<b>Safety Precautions</b> .....	2		
<b>What's in the box</b> .....	3		
<b>Production overview</b> .....	4		
Functions of Button and Port .....	5		
Remote controller instructions .....	6		
<b>Introduce</b> .....	7		
Turn on/off the Smart TV BOX .....	7		
Connect to Networks .....	8		
WI-FI .....	8		
Wired Network Ethernet .....	9		
Main menu overview .....	10		
Internet TV program .....	11		
Menu .....	11		
Streaming .....	12		
Manage the app in the Game and Education category ....	13		
Browse .....	15		
		Manage the Applications .....	16
		Screen adjustment .....	19
		AV Output .....	19
		Keyboard User Guide .....	20
		Language setting .....	20
		Date & Time settings .....	21
		Features .....	22
		Specification .....	22

For advanced operations such as Dev tools, it is suggested to be operated by professional engineers.

Images and screenshots used in this user manual may differ in appearance from the actual product.

Content in this user manual may differ from the product, or from software provided by service providers or carriers, and is subject to change without prior notice

Keep your Smart TV Box dry.

Do not use or store your Smart TV Box in dusty, dirty areas.

Do not place your Smart TV Box on slopes. If your Smart TV Box falls, it can be damaged.

Do not place your Smart TV Box in too hot or too cold areas.

Do not place your Smart TV Box with metal objects such as keys and necklaces.

Do not place your Smart TV Box near magnetic fields

Do not place your Smart TV Box near or in heaters, microwaves, hot cooking equipment, or high pressure containers.

Simply put, do not drop, throw, or sit on your Smart TV Box, for obvious reasons.

Do not use your Smart TV Box near other electronic devices.

Please do not use your Smart TV Box in thundery days.

Keep your Smart TV Box away from liquid substance.

Here's what you should find inside the packing box:



Smart TV Box



Remote Control



Quick Start Guide



HDMI cable



AV out cable



AC adapter


Watch high quality TV programs absolutely free! No contract, no subscription, no fee.

The Five Key Points of Smart TV Box:

- » **User Interface:** Keyboard, Motion Sensor Remote Control, and Mouse input available, operation is super easy (Keyboard, Mouse are not included)
- » **Social Network:** Facebook, Twitter, Skype available
- » **Internet Browser:** Surf the Internet freely
- » **Education:** You can download educations apps to learn with your kids
- » **Game:** You can download games to have fun with your family members

## Functions of Button and Port

- 1. Remote control signal sensor**
- 2. Power:**  
Turn on /off the Smart TV Box
- 3. USB port:**  
Connect USB mouse, USB keyboard, USB device etc.
- 4. MicroSD card slot**
- 5. DC IN:**  
Connect your Smart TV Box to a AC adaptor
- 6. HDMI port:**  
Connect your Smart TV Box to an HDTV with an HDMI cable
- 7. Upgrade:**  
Press Upgrade button for upgrading the firmware
- 8. Ethernet port:**  
Connect your Smart TV Box to a wired network with an Ethernet cable (not included).
- 9. AV out port:**  
Connect your Smart TV Box to a non-HDTV

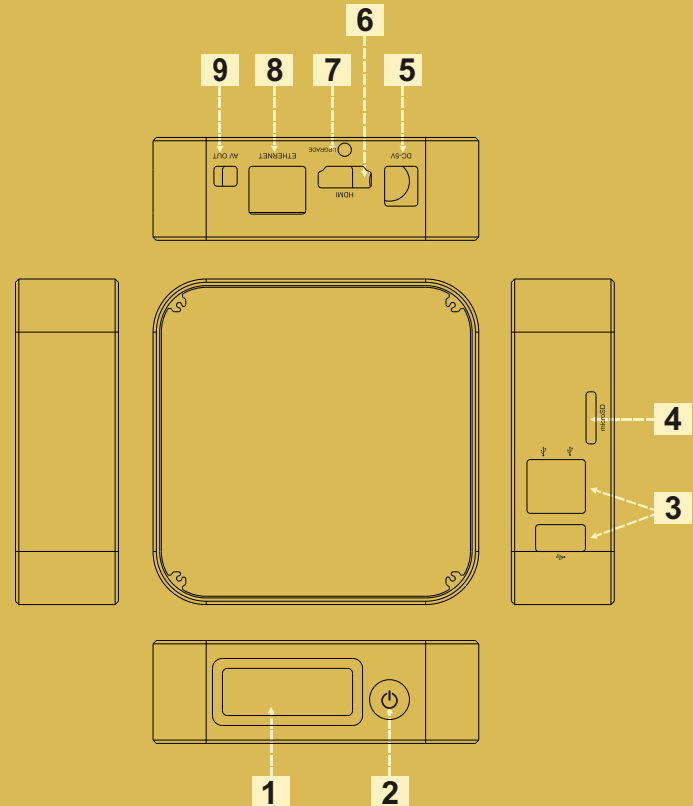

## Remote controller instructions



Note: Insert remote control receiver into the USB port on the Smart TV Box before you use the remote control.

## Turn on/off the Smart TV BOX

1. Connect your Smart TV box to your TV by HDMI cable or A/V out cable before you turn on Smart TV Box.
2. **Power on:** plug the power adapter to the power socket, then connect the power adapter to your Smart TV box, then long press the power button on the Smart TV Box at least 3 seconds, the indicator light is blue now, your Smart TV box is starting.
3. **Power off:** Long press the power button on the Smart TV box, and then show you a message “Your Smart TV Box will shut down”, select “OK” to turn off.
4. When the Smart TV box is running, press the Power button on the remote controller to put your Smart TV Box into stand-by mode, when your Smart TV Box is in stand-by mode, press Power button again to start it.
5. **LED Indicator light:** when your Smart TV is running, the indicator light is blue, and when your Smart TV box is in stand-by mode, the indicator is red.



## Connect to Networks

### 1. WI-FI :

For networked functions, such as Browser, Map, Email, YouTube, Facebook, Play Store..., you need to link to internet firstly. Please operate as follow steps to setup your networks,

Starting from the main menu,

Move your hand to move the circle to point to the “Wi-Fi” icon on the low-right corner of the screen, press “Ok” again, you will see Wi-Fi link interface, you will find all the wireless routers near your home. Select your home router, input your router's password, press “Connect”, now, you are linked to the Internet.



## Connect to Networks

### 2. Wired Network Ethernet :

1). Plug the network cable into the Ethernet port of your Smart TV Box.

2). When turn on the Smart TV Box every time, you need to open the Ethernet, the step is as follows:

Starting from the main menu,


(1) Select the “Menu” on your Smart TV Box's main page screen.

(2) Select System app > Settings > Ethernet, slide the OFF icon to right side.



## Main menu overview

1	Select the button for Online TV programs
2	Select the button to add more Internet video sources
3	Move the cursor up and down for more Internet video
4	Select the buttons for all APPs
5	Move the cursor up and down for more APPs
6	Date
7	Show if the network is connected
8	For more functions

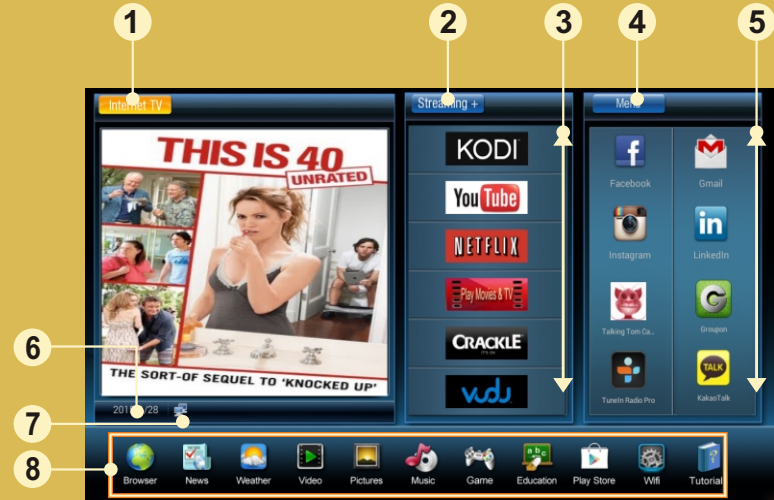

## Internet TV program

Select “ **Internet TV** ” in the main menu, and enter into Internet TV programs, there are many programs for your choice.



## Menu

Select “ **Menu** ” in the main menu, and all apps display as the below:



## Streaming

### 1) Add more internet video sources to the streaming list

- a. Select “ **Streaming +** ” on the main menu, then you can see many internet video sources.
- b. Select the video icon you want to add, then the screen will display as below, and press “**yes**”, then add the video to the streaming list on the main menu successfully.



### 2) Delete the video sources from the streaming list in the main menu

In the streaming list, select the video source you want to delete, and hold on OK button on the remote controller or the left mouse button, then the screen will display as right, and press “**yes**”, then delete successfully.



## Manage the app in the Game and Education category

### 1) Add the Apps to the Games or Educations categories

Select the “**Game**” icon or “**Education**” icon in the bottom of the main menu, and enter into the Game or Education as below.



Select “ **Game +** ” or “ **Education +** ” , and enter into the Apps list, and select the App you want to add into the Game or the Education, hold on OK button on the remote controller or the left button of the mouse, then the screen will display as below, and press “**yes**” ,confirm the add app to the Game or Education categories.




## Manage the app in the Game and Education category

### 2) Delete App from the Game or Education category.

In the Game or Education list, select App you want to delete, and hold on OK button on the remote controller or the left mouse button, then the screen will display as below, and select “**yes**”, then delete successfully.



## Browse

- » Use browser to view web pages and to search the information on the web.
- » After connecting to networks through WI-FI or Ethernet cable, select  browser icon.
- » Press Return on the remote controller to close the browser and return to the home screen.
- » Press Menu on the remote controller to pop out the option menu, or select the menu icon on the top right corner



### 1) Refresh the current Page

Press **Menu** on the remote controller and select **Refresh**, The webpage is refreshed.

### 2) Go back among the web pages you have opened.

Press the **Return** button on the remote controller or the right mouse button.

### 3) Change Browse Settings

Press **Menu** and select **Settings**. You can set default zoom, set home page, privacy setting, clear cache and history, clear all cookie data, etc.





## Manage the Applications

4) Select the app you want to install, the below prompt message will display, then select “install”, the App will be installed.



## 2. Uninstall app

Go to “setting” → “Applications” → manage application, and select the app you want to uninstall, then the below prompt message will display, and press “ok”, the app will be uninstalled.



## Manage the Applications

### 3. Download applications

- From the Main menu select “All Apps” then select Android “Play store”
- Log in your Google account. If you do not have an existing Google account, you will need to complete this setup prior to downloading additional Apps
- After a few minutes, it will enter into the interface of “Android Market Terms of Service”. Touch “Accept” after reading if you accept the terms to enter Market. Then you can select to download the Apps which you want to install in your Smart TV Box.
- Search for and Install your desired App.



**Note: As the storage of the Smart TV Box is limited, pls insert an SD card or USB to the Smart TV Box when you want to download and install more Apps.**

### 4. Manage the applications

(1) Select Manage, you will enter into app list you can manage as below.

(1) Select the app you want to uninstall, and display as below, and select “OK”, the app will be uninstalled.

## Screen adjustment

The Smart TV Box will auto-detect the TV's screen size, and auto-fit the display area. In case you find the display area does not fit your television screen, please select "Menu" → "System app" → "Settings" → "Display" → "Screen scale", then press (◀), (▶), (▲), (▼) to adjust the screen display area. (See below figures)




## AV Output

 
The default output of the TV Box is HDMI and AV OUT. If your TV does not have HDMI port, you need to change the input signal of your TV set to AV mode.


## Keyboard User Guide

The keyboard will appear whenever the user taps on the blank area that requires data to be entered.



Tap (  ) to switch between lowercase letters and capital letters.

Tap (  ) to switch numbers and symbols.

Tap (  ) to delete date

## Language setting

On the Main menu touch “Internetworld” select “Settings” then scroll to select “language and keyboard”, select “Select Language”, then scroll to select your required Language and touch. Click the right mouse button or the return on the remote controller.



## Date & Time settings

Use the Date & Time settings to set date, time zone, time, time format, date format.



## Features

- » Streaming TV and videos from the Internet
- » 1080P gives you hi-resolution enjoyment
- » Full function Internet browser
- » Social Network on your TV (Facebook, Twitter, Skype, Email)
- » Education and Game apps are available

## Specification

- » 1.6 GHz (Dure cores)
- » Decoder: 1080P hardware video decoder
- » Output: HDMI, AV OUT
- » Internet: Ethernet
- » Wi-Fi: 802.11b/g/n
- » Built-in memory: 4GB
- » MicroSD card slot, up to 32GB
- » USB port, Ethernet jack
- » Power supply: AC 100~240V, DC 5V
- » Max power consumption: 3W
- » Product Dimension: 98x98x32mm