Sungale

Cloud Digital Kitchen
User's Manual

For ongoing product improvement, this manual is subject to modification without prior notice.

MODEL: NC850

User Notice

This product has met electronic emissions standards required. It can be used safely at home.

Contents

Product Introduction	2
Safety Precautions	3
Product Overview	5
Getting to Start-up & Register	6
WIFI Setup	8
Cloud Album	9
Internet Radio	11
Grocery Shopping	12
Social Media	14
Cooking Sites	15
Audio Book	17
Online Recipes	18
How to add a favorite recipe	19
Set the timer	19
How to Convert	20
Enjoy Music	21
Enjoy Video	22
Stored Photos	24
My Recipes	25
Cloud Storage	27
Utilities Menu Overview	28
Google Account	29
Volume Control	29
Connecting to PC	30
Support	32

Features

- Cloud Album to receive and display real-time photos from cell phones
- Smart phone downloads app from Google's Play Store or Apple's App Store to manage your cloud album
- Cloud Storage to preserve your most precious documents in various formats and push common files to the screen to display
- Voice search to purchase goods from online grocery stores.
- Two big stereo Hi-Fi speakers bring you music enjoyment
- Three most popular Audio Books (Audible.com, audiobook.com, LoyalBooks) are available
- Internet Radio iHeartRadio, Pandora, TuneIn available
- No 1 Music player PI Music Player installed
- Watch Movies from Netflix, and watch videos from YouTube
- Display your personal stored photos and videos
- Social Media Facebook, Twitter, Instagram, Pinterest available
- Thousands easy online recipes and most popular cooking sites
- Store your personal recipes
- Browser internet
- Touchscreen operation

Specifications

- Processor: 1.6GHz dual core CPU
- Touch panel: Capacitive Glass panel
- Screen: 8" TFT LED screen
- Resolution: 1024x768
- Wireless: 802.11b/g/n
- Input: USB device; SD/SDHC card
- Camera: 2MP
- Audio output: 2x3W
- Power supply: AC 100-240V, DC 5V

Package Contents

- Cloud Digital Kitchen
- Quick start guide
- AC adaptor
- USB cable

Safety Precautions

Please read the following guidelines carefully to ensure user safety.

Power Precautions

WARNING: indicates informatio

ury and/or death to the user.

CAUTION: indicates information that, if neglected, could result in serious inj ge.

t injury to the

01.Use only the authorized power supply product. Failure to do so could result in product malfunction.

02.When connecting the power source, make sure that your hands are free of moisture. Failure to do so could result in electrical shock.

03.Make sure that the power supply is firmly plugged in and not loose. Failure to do so could result in electrical shock.



04.Do not let the power cord get overly entangled and do not place any heavy objects on the cord. Failure to do so could result in electrical shock.

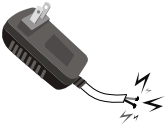

05.Do not connect the power supply to an electrical power strip with other various connections. Failure to do so could result in fire.



06.Disconnect the power supply during inclement weather conditions that include thunder and lightning. Failure to do so could result in fire.

Safety Precautions

Please read the following guidelines carefully to ensure user safety and avoid malfunction.

Product Related Precautions

01. Dropping the product or subjecting it to a significant impact can cause critical damage.

02. Spilling water or any other liquid on the product can cause critical damage.

03. Striking or scratching the LCD screen may cause critical damage.



04. When cleaning the LCD screen, turn off the power and wipe it gently with a soft cloth.



05. Do not subject the product to severe humidity and/or heat.

06. Make sure to power off the unit before disconnecting the power supply.



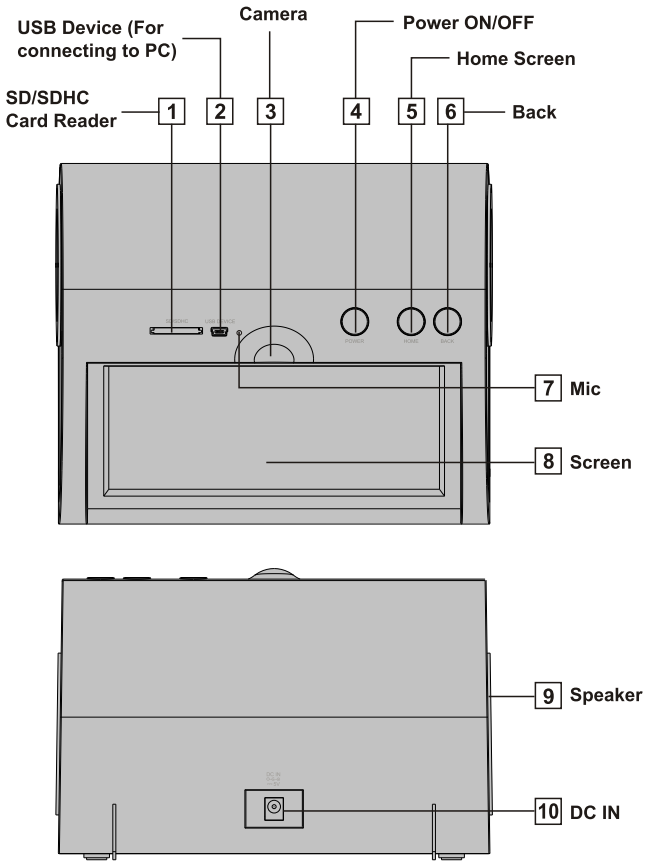
USB Device (For connecting to PC)
Camera
Power ON/OFF
Home Screen
SD/SDHC Card Reader
1
2
3
4
5
6
Back
7 Mic
8 Screen
9 Speaker
10 DC IN

Getting to Start-up & Register

When starting for the first time, you will need to register the device by going to the website "http://cloudalbum.sungale.com" on your computer, tablet or smart phone. The device's serial number will be displayed on the screen of the device when powered on.

From the website, click **"Sign up"** to register accordingly.

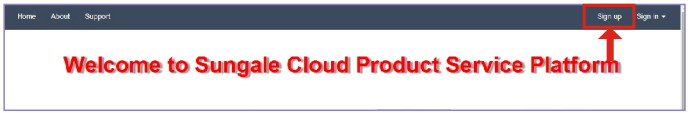

You will be prompted to register the device by providing the serial number from your device's screen as well as some basic personal information.

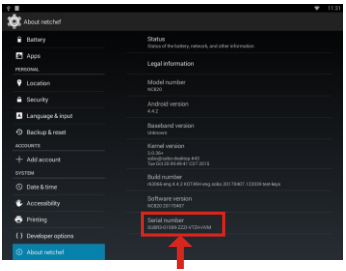

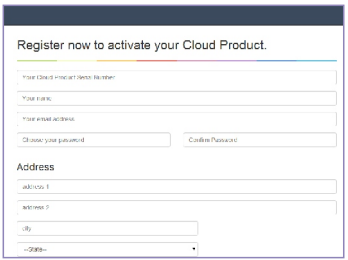

After registering the device on your computer, tablet or smart phone, click "I have registered" on the device.

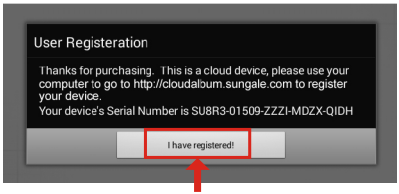

You will then be prompted to connect to your WiFi network, Follow the instructions by selecting your network and inputting your password.

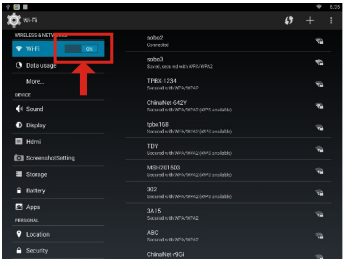

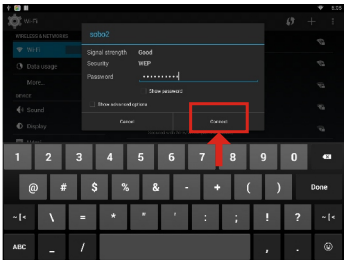

After connecting to your WiFi network, you will then be taken to the main screen.

After you have registered the device, whenever you turn it on, it will go directly to the main screen.

To navigate the main screen, simply slide your finger from right to left until coming to the option you want and selecting by tapping the screen.

WIFI Setup

You should automatically be prompted to setup your WiFi connection during the device registration process, but if you ever need to connect to a new WiFi network, follow below instructions:

Step 1:

To setup the WiFi Connection on your device, select **"Utilities"** from the home screen.

Step 2:

Select the **"Setting"** menu icon.

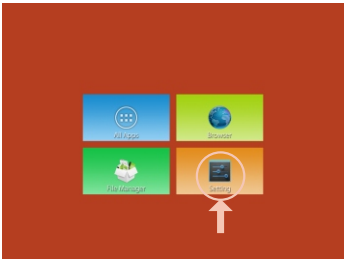

Step 3:

Slide the WiFi button to the **"ON"** position.

Step 4:

Select your network, put in your password, and touch **"Connect"**.

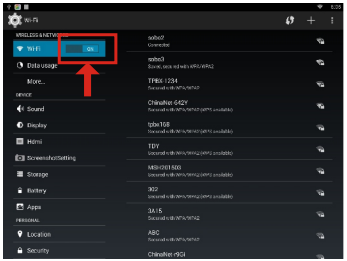

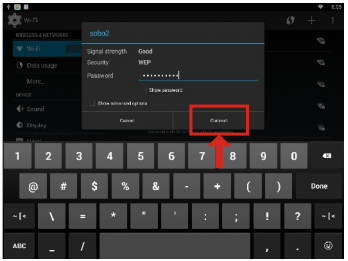

Cloud Album

The Cloud Album gives you access to all the photos you have stored in your free device storage. You must go back to the website "http://cloudalbum.sungale.com" to add photo albums and slide shows into this section.

Website required steps

Step 1.

Log into your account.

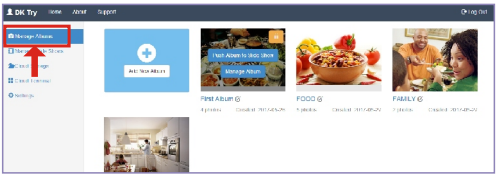

Step 2:

Go to "Manage Albums" where you can create albums and add photos by placing cursor over the album box and selecting "Manage Album" and then clicking on the grey cloud icon in the middle of the screen.

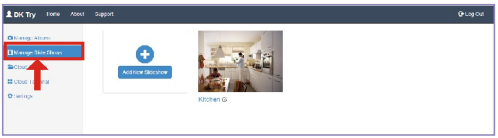

Step 3:

Go to "Manage Slide Shows" to add slideshows and go back to "Manage Albums" to select "Push Album to Slide Show".

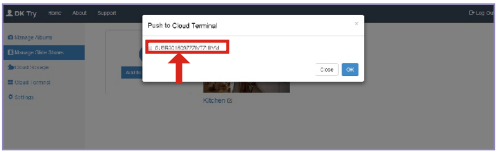

Step 4:

Go back to "Manage Slide Shows" to select "Push to Cloud Terminal" and checkmark your device.

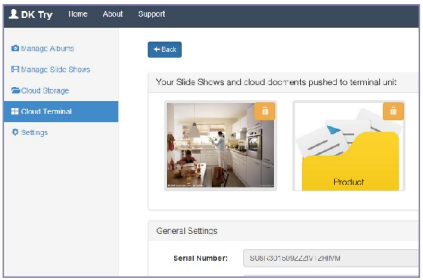

Step 5.

Go to "Cloud Terminal" to select your device image to be able to adjust settings of the slideshow.

Device steps

To access and view these photos, click **"Cloud Album"**. Select the album and photos you wish to view.

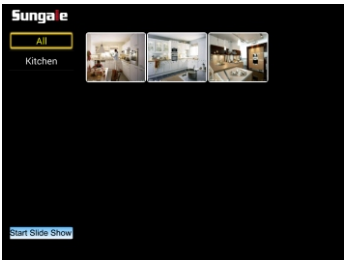

Note: Photos in Cloud Album will automatically play based on the settings you have setup from the website. Review step 5 for setting up.

The Internet Radio tab gives you access to numerous Internet Radio Hubs.

Step 1. From the Home screen, Select **"Internet Radio"**.

Step 2. Select the **"+"** symbol to enter the online storage back list.

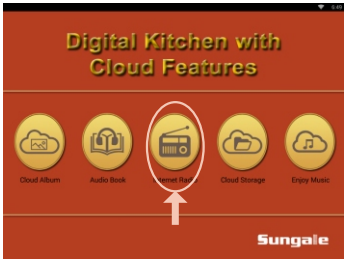

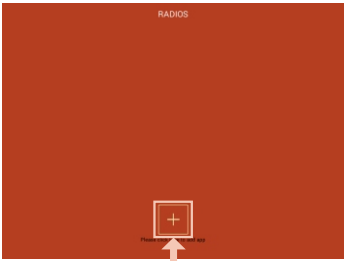

Step 3. Select the app that you would like to install and download to your device.

Step 4. Select **"Yes"** in the pop up window, and then select **"YES"** to confirm the download. (Please do not change the screen during download).

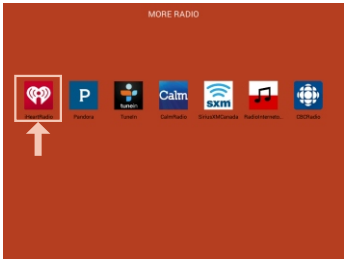

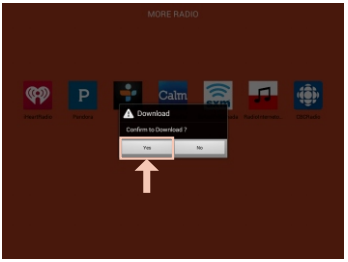

Step 5. Select **"Yes"** to start the installation, then select **"Next"** and **"Install"** to install the app.

Step 6. After the installation is complete, the Internet Radio APP will be available on the front screen, where you can now select and use it.

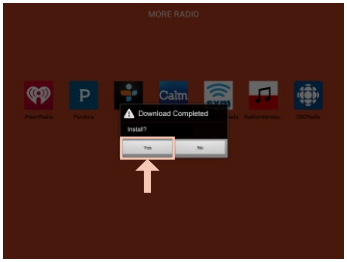

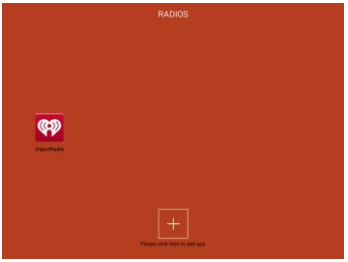

Grocery Shopping

Your device has been pre-installed with 4 popular grocery shopping sites, these are Amazon, Freshdirect, Shop Food EX and GoBiO.

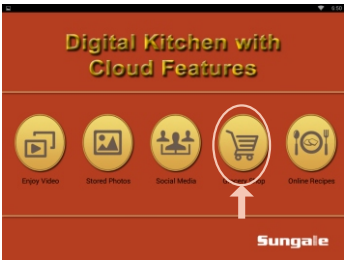

Searching Grocery steps

Step 1. Touch the site you want to shop from, and a voice command will be prompted, and speak what you are wanting to search, such as "apple".

Step 2. "apple" will be displayed on the list, and then speak the position of the correct word you want, which in this case is position "two", then your device will begin searching "apple" on the selected website.

Tips: You also can type what you want.

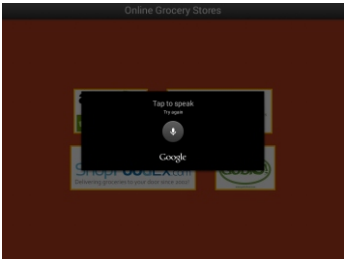

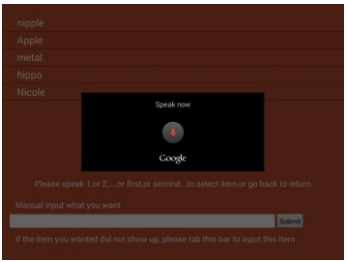

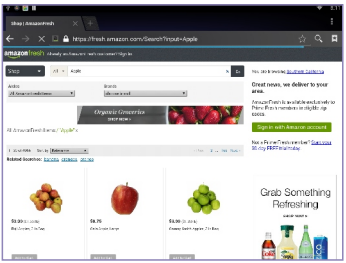

Social Media

The Social Media tab gives you access to numerous Social Media Hubs.

Step 1. From the Home screen, Select **"Social Media"**.

Step 2. Select the **"+"** symbol to enter the online storage back list.

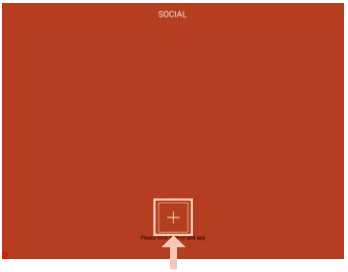

Step 3. Select the app that you would like to install and download to your device.

Step 4. Select **"Yes"** in the pop up window, and then select **"YES"** to confirm the download. (Please do not change the screen during download).

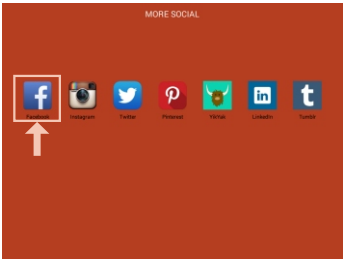

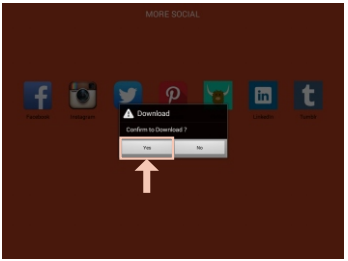

Social Media

Step 5. Select **"Yes"** to start the installation, then select **"Next"** and **"Install"** to install the app.

Step 6. After the installation is complete, the Social Media APP will be available on the front screen, where you can now select and use it.

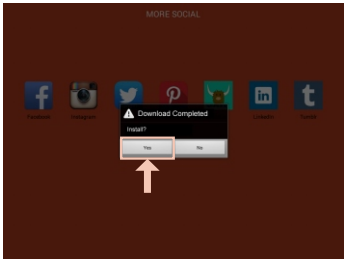

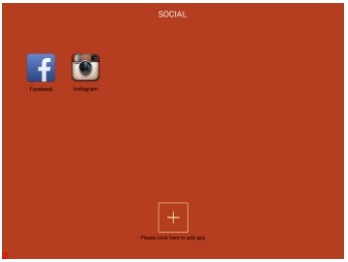

Cooking Site

The Cooking Site tab gives you access to numerous Cooking Site Hubs.

Step 1. From the Home screen, Select **"Cooking Site"**.

Step 2. Select the **"+"** symbol to enter the online storage back list.

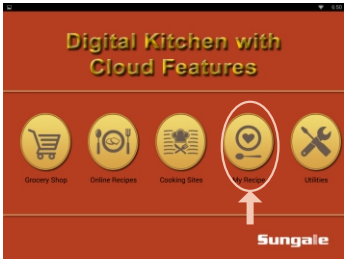

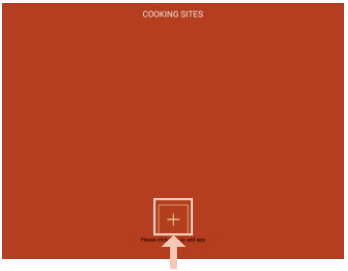

Step 3. Select the app that you would like to install and download to your device.

Step 4. Select **"Yes"** in the pop up window, and then select **"YES"** to confirm the download. (Please do not change the screen during download).

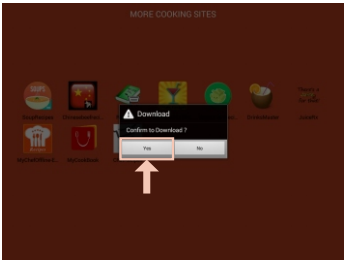

Step 5. Select **"Yes"** to start the installation, then select **"Next"** and **"Install"** to install the app.

Step 6. After the installation is complete, the Cooking Site APP will be available on the front screen, where you can now select and use it.

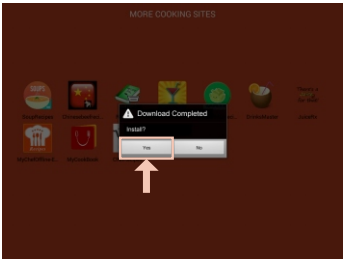

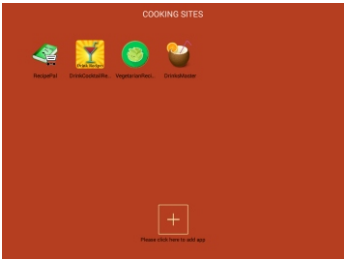

The Audio Book tab gives you access to numerous Audio Book Hubs.

Step 1. From the Home screen, Select **"Audio Book"**.

Step 2. Select the **"+"** symbol to enter the online storage back list.

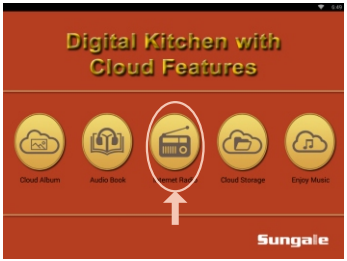

Step 3. Select the app that you would like to install and download to your device.

Step 4. Select **"Yes"** in the pop up window, and then select **"YES"** to confirm the download. (Please do not change the screen during download).

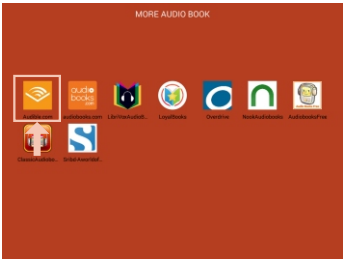

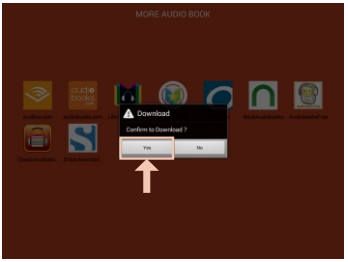

Step 5. Select **"Yes"** to start the installation, then select **"Next"** and **"Install"** to install the app.

Step 6. After the installation is complete, the Audio Book APP will be available on the front screen, where you can now select and use it.

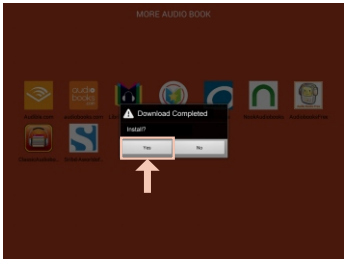

Online Recipe

There are thousands of online recipes and over 500 preload local recipes within the available categories for you to choose from. When your device is connected to a WiFi network, there is a selection of online recipes, but when your device is not connected to a network, there will only be the locally installed recipes.

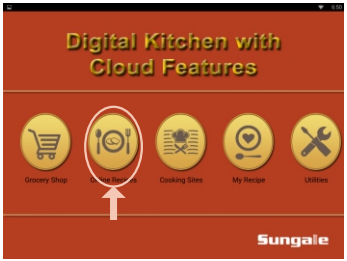

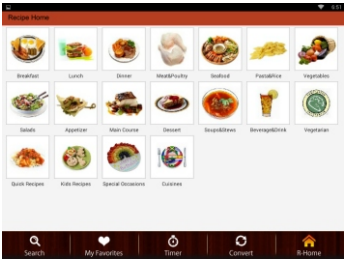

How to add a favorite recipe

Select and enter the recipe, and touch the Icon " " on the top left corner, then touch "yes" to add to my favorite, then you will find it in "my favorite".

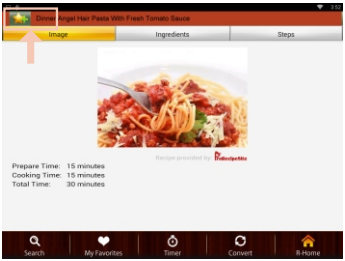

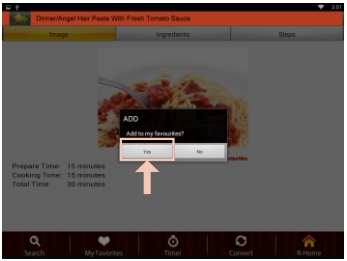

Set the timer

Touch "Timer" on the bottom of the screen, and input the time you want to set, and touch "Start", then the Netchef will begin the timer.

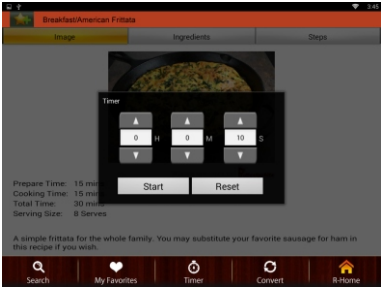

Touch the "convert", and select "volume" or "weight" you want to convert, and select the "volume unit" or "weight unit" , then input the quantity, then touch "convert".

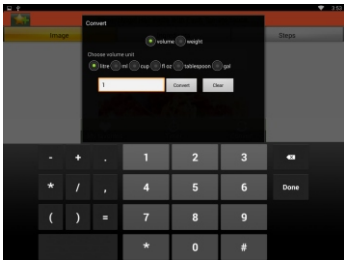

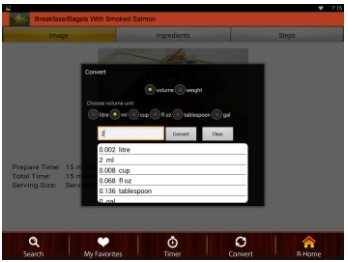

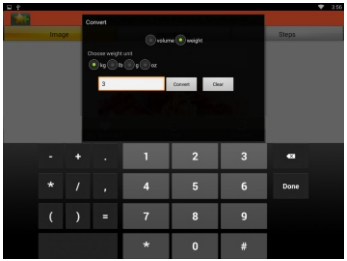

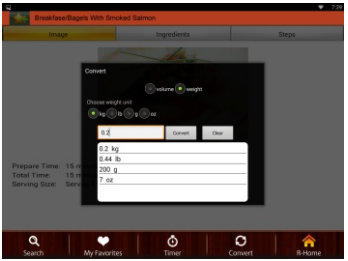

Enjoy Music

The device gives you the ability to play your favorite music files that you have already download or have access to from your computer.

Step 1. You either need to connect your device to your PC using a USB cable or transfer your music files onto an SD Card.

Step 2. If transferring onto an SD card, you simply have to insert the card with your music files into the top of your device. If connecting with USB Cable to your computer, please refer to Connecting to PC section.

Step 3. Once the files are within the internal memory of your device or inserted with an SD card, click on the **"Enjoy Music"** tab.

Step 4. The music player will launch and you can now click on your music tracks you want to play.

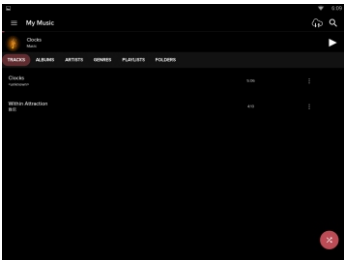

Tip: You can create playlists and sort your songs by "Album", "Artist" and "Genres".

Enjoy Video

The device gives you the ability to play your favorite online videos or personal video files that you already own or have access to from your computer. From the home screen select the **"Enjoy Video"** tab.

Then select the option you want to use.

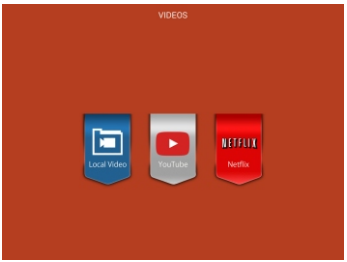

Local Video

If there are videos stored in the internal memory of the device or on an SD card, you can use the local video selection to watch them.

When clicking the **"Local Video"** option, you will be taken to the gallery where different Album options are displayed.

Each album may have multiple videos, so select the album and then locate the video you want to play and click to open. You will then see a play button in the middle of the screen. Click the **"play button"** to start video.

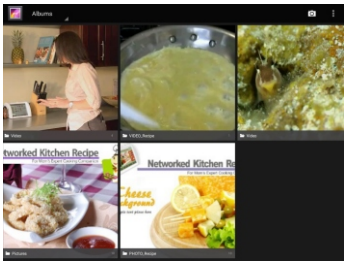

Tip: Tap middle of screen to pause. Slide finger along bottom of screen to fast forward or rewind.

Netflix

If you have a Netflix account, select it from the options and then log into your account to watch your favorite TV Shows, movies, and Netflix original content.

YouTube

Youtube is an entertainment video hub where you can Play Music, Watch movies or Play a variety of other entertainment, educational and learning videos. Select Youtube to access, browse or search for you favorite online video content.

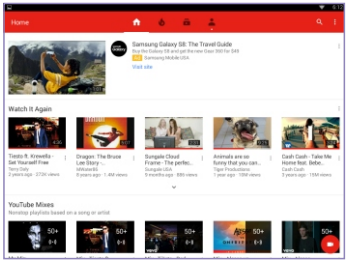

Tip: Youtube is an excellent source for cooking video tutorials.

Stored Photos

The device can display your images that have been stored in the internal memory or from an SD card. From the main menu, tap on the **"Stored Photos"** tab.

You will enter the gallery showing all of your locally stored content.

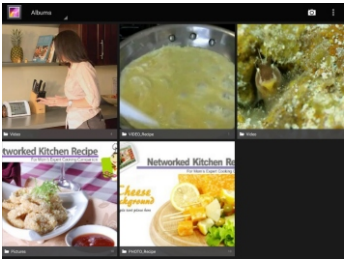

Click on the album that has the photos you'd like to display, and all the images inside that album will pop-up. You can then select to play a slideshow by clicking the 3 dots in the upper right corner, or select individual images to display.

Tip: You can use photos as an easy way to store your favorite recipes.

My Recipe

The devicegives you the ability to store your various recipes in the internal storage for easy access. Please review connecting to PC section before reading further. After you have connected to your computer successfully, you will need to locate the **PersonalRecipes** section, and select it.

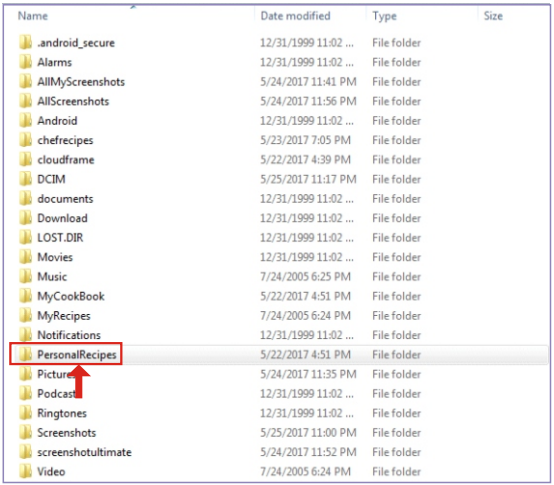

When entering this folder, you will find 3 folders. "PHOTO_Recipe", "TXT_Recipe" and "VIDEO_Recipe". Based on the file you are uploading, select the correct folder to store your recipe content, and then copy the file accordingly. You should see your computer screen pop-up letting you know when the copying has started and when it has finished.

After files have been copied, go to your device and turn-off the USB storage and unplug the USB cable. From the main menu, click on the **"My Recipe"** tab.

You will then see the 3 selectable options: "TXT Recipes", "Photo Recipes" and "Video Recipes".

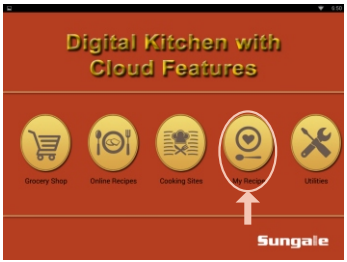

Click the section where you stored the recipes from your computer, and the different recipes will be shown for your selection in that category.

The Cloud Storage gives you access to all the files you have stored in your free device storage. You must go back to the website "http://cloudalbum.sungale.com" to adding documents such as Word, Excel, PDF, PPT and TXT Files into this section.

Website required steps

Step 1.

Log into your account.

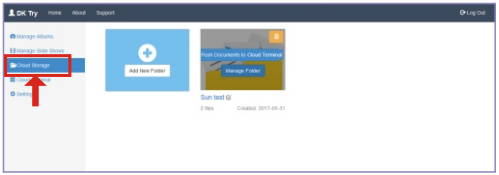

Step 2:

Go to "Cloud Storage" where you can create folder and add documents by placing cursor over the folder box.

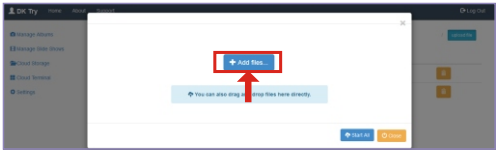

Step 3:

Selecting "Manage Folder" and then clicking on the grey cloud icon in the middle of the screen to add the documents.

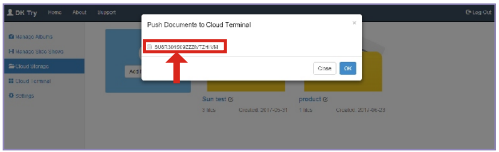

Step 4:

Select "Push Documents to Cloud Terminal" and checkmark your device.

Device steps

To access and view these documents, click "Cloud Storage". Select the document you wish to view.

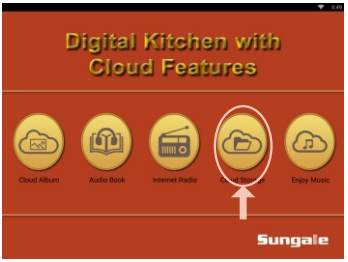

Utilities Menu Overview

From the Home screen, Select the **"Utilites"** tab.

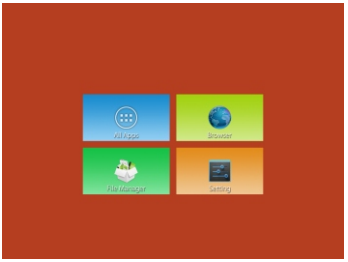

All Apps: where your download & installed Apps and Google Play are located.
Browser: where you can browse, surf and search the internet.
File Manager: where you can search for locally installed apps and files.
Setting: where all your device settings are located for your device.

Google Account

A Google Account will allow you to access the Google Play Store for APP downloads, and Google applications.

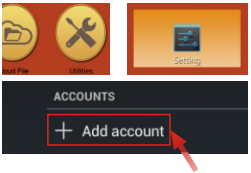

Step 1.

Go to the Settings menu, and scroll down to **"+Add account"**, and select it.

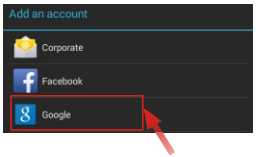

Step 2.

Select **"Google"** under the add an account menu.

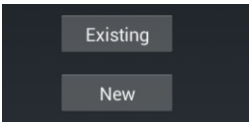

Step 3.

Select **"Existing"** if you currently have a gmail email account and put in your email and password.

Select **"New"** to setup a gmail email account.

Adjust the Volume

1. Hold down the **"HOME"** button for 2 seconds on the device, and the volume bar will display on the screen. You can then slide the volume bar to adjust the volume.
2. Slide your finger to the left or right on the top part of home screen to adjust the sound volume up or down.

Step 1. Connect your device and your computer by the USB cable.

Step 2. Slide the USB icon ( ) to down on the top of the notification bar, then select "USB connected".

Step 3. Touch "Turn on USB Storage".

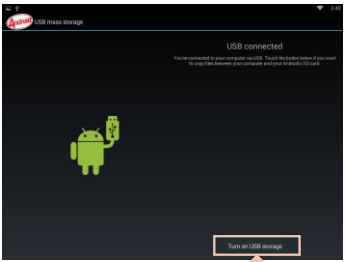

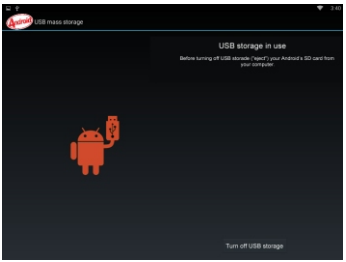

Now you can transmit the data between your device and your computer.

Tip 1: You also can use the device as a regular storage device, and copy, paste, delete files after connecting your device to the PC.

Tip 2: For the first time you connect this device to your computer, youmight be asked to install driver of your device so that it can be recognized by your computer. Please follow the installation guide or contact your computer service provider for help.

Support

1. Visit the support site

- For manual download, FAQs and More supports: www.sungale.com

2. Contact Sungale Support team

- Toll Free number in the USA: 800-473-5156
- Service email: service@sungale.com

3. Follow Netchef on Twitter:

- Https://twitter.com/Netchef_true @Netchef_true

4. Follow Sungale on Twitter:

- Https://twitter.com/GoSungale @GoSungale

5. Follow Sungale on Facebook:

- Https://www.facebook.com/SungaleUSA/

Tips: For ongoing product improvement, this QSG is subject to modification without prior notice.

• FCC Part 15.19

This device complies with Part 15 of the FCC Rules .Operation is subject to the following two conditions: (1) this device may not cause harmful interference , and (2) this device must accept any interference received ,including interference that may cause undesired operation .

• FCC part 15.21

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

• FCC part 15.105

Note : This equipment has been tested and found to comply with the limits for a Class B digital device ,pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation .This equipment generates, uses, and can radiate radio frequency energy and ,if not installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular installation .If this equipment does cause harmful interference to radio or television reception ,which can be determined by turning the equipment off and on ,the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different form that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.