



INSTRUCTIONS FOR USE

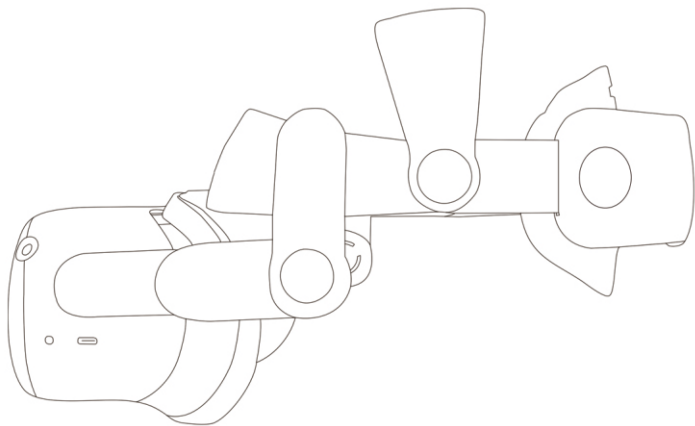


Installation steps



① Check that the TPU head pad is properly installed

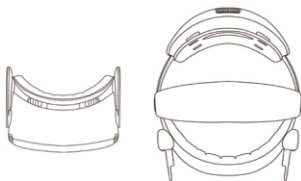


② Remove the original strap and take the head strap out of it

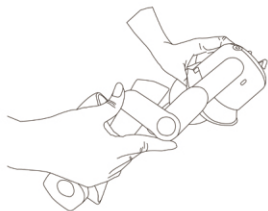


③ Align one side of the buckle



④ Align the other side with the buckle

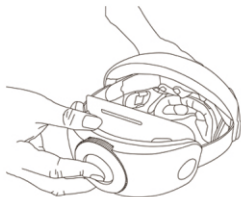

⑤ Adjust the rear knob to adjust the size

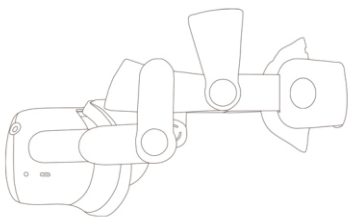

⑥ Adjust to suitable size to use